ELECTRONIC CASH REGISTER

TK-3200

User's Manual

Introduction

Setting Up

Getting Started

Paper Installation

Set Date/time

Introducing the Terminal

Display/Keyboard

Sheet Holder

Basic Operations & Setups

Registrations

Programs

Advanced Operations

Useful Features

Reports

Troubleshooting

Error Code Table

User Maintenance


Paper Replacement




Important!

Your new cash register has been carefully tested before shipment to ensure proper operation. Safety devices eliminate worries about breakdowns resulting from operator errors or improper handling. In order to ensure years of trouble-free operation, however, the following points should be noted when handling the cash register.


Do not locate the cash register where it will be subjected to direct sunlight, high humidity, splashing with water or other liquids, or high temperature (such as near a heater).

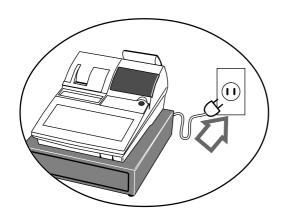


Be sure to check the sticker on the side of the cash register to make sure that its voltage matches that of the power supply in the area.

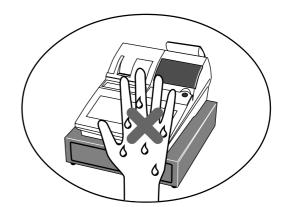


Never operate the cash register while your hands are wet.

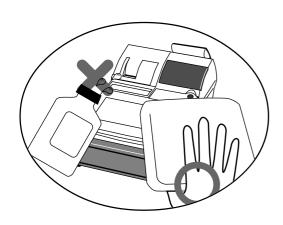

Use a soft, dry cloth to clean the exterior of the cash register. Never use benzene, thinner, or any other volatile agent.

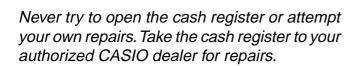

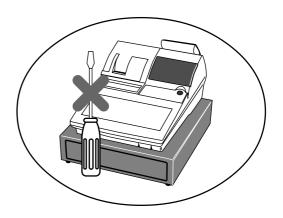


Introduction

Congratulations on your selection of a CASIO TK-3200 electronic cash register. This ECR is the product of the world's most advanced electronic technology, for outstanding versatility and reliability.

Simplified operation is made possible by a specially designed keyboard layout and a wide selection of automated, programmable functions.

A specially designed keyboard layout and a bright, easy-toread display help to take the fatigue out of long hours operation.

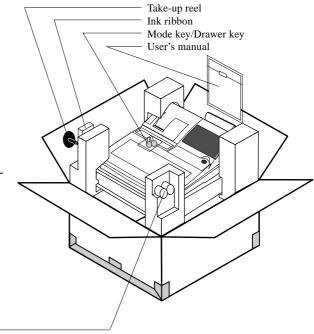



The CE marking below applies the EU region.
Declarer of conformity is as follows:
Casio Europe GmbH
Bornbarch 10, 22848 Norderstedt Germany



This mark applies in EU countries only.

WARNING: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Roll paper

Please keep all information for future reference.

Laite on liitettävä suojamaadoituskoskettimilla varustettuun pistorasiaan Apparatet må tilkoples jordet stikkontakt Apparaten skall anslutas till jordat uttag

The main plug on this equipment must be used to disconnect mains power.

Please ensure that the socket outlet is installed near the equipment and shall be easily accessible.



Batterij niet weggooien, maar inleveren als KCA.



TK-3200 User's Manual 3

Safety Precautions

• To use this product safely and correctly, read this manual thoroughly and operate as instructed.

After reading this guide, keep it close at hand for easy reference.

Please keep all informations for future reference.

Always observe the warnings and cautions indicated on the product.

About the icons

In this guide various icons are used to highlight safe operation of this product and to prevent injury to the operator and other personnel and also to prevent damage to property and this product. The icons and definitions are given below.



Indicates that there is a risk of severe injury or death if used incorrectly.



Indicates that injury or damage may result if used incorrectly.

Icon examples

To bring attention to risks and possible damage, the following types of icons are used.



The \triangle symbol indicates that it includes some symbol for attracting attention (including warning). In this triangle the actual type of precautions to be taken (electric shock, in this case) is indicated.



The \otimes symbol indicates a prohibited action. In this symbol the actual type of prohibited actions (disassembly, in this case) will be indicated.



The symbol indicates a restriction. In this symbol the type of actual restriction (removal of the power plug from an outlet, in this case) is indicated.

Warning!

Handling the register



Should the register malfunction, start to emit smoke or a strange odor, or otherwise behave abnormally, immediately shut down the power and unplug the AC plug from the power outlet. Continued use creates the danger of fire and electric shock.

• Contact CASIO service representative.



Do not place containers of liquids near the register and do not allow any foreign matter to get into it. Should water or other foreign matter get into the register, immediately shut down the power and unplug the AC plug from the power outlet. Continued use creates the danger of shorting, fire and electric shock.

• Contact CASIO service representative.



Should you drop the register and damage it, immediately shut down the power and unplug the AC plug from the power outlet. Continued use creates the danger of shorting, fire and electric shock.

• Attempting to repair the register yourself is extremely dangerous. Contact CASIO service representative.

Warning!



Never try to take the register apart or modify it in any way. High-voltage components inside the register create the danger of fire and electric shock.

• Contact CASIO service representative for all repair and maintenance.

Power plug and AC outlet



Use only a proper AC electric outlet (100V~240V). Use of an outlet with a different voltage from the rating creates the danger of malfunction, fire, and electric shock. Overloading an electric outlet creates the danger of overheating and fire.



Make sure the power plug is inserted as far as it will go. Loose plugs create the danger of electric shock, overheating, and fire.

• Do not use the register if the plug is damaged. Never connect to a power outlet that is loose.



Use a dry cloth to periodically wipe off any dust built up on the prongs of the plug. Humidity can cause poor insulation and create the danger of electric shock and fire if dust stays on the prongs.



Do not allow the power cord or plug to become damaged, and never try to modify them in any way. Continued use of a damaged power cord can cause deterioration of the insulation, exposure of internal wiring, and shorting, which creates the danger of electric shock and fire.

 Contact CASIO service representative whenever the power cord or plug requires repair or maintenance.

⚠ Caution!



Do not place the register on an unstable or uneven surface. Doing so can cause the register — especially when the drawer is open — to fall, creating the danger of malfunction, fire, and electric shock.





- Areas where the register will be subject to large amounts of humidity or dust, or directly exposed to hot or cold air.
- Areas exposed to direct sunlight, in a close motor vehicle, or any other area subject to very high temperatures.

The above conditions can cause malfunction, which creates the danger of fire.



Do not overlay bend the power cord, do not allow it to be caught between desks or other furniture, and never place heavy objects on top of the power cord. Doing so can cause shorting or breaking of the power cord, creating the danger of fire and electric shock.



Be sure to grasp the plug when unplugging the power cord from the wall outlet. Pulling on the cord can damage it, break the wiring, or cause short, creating the danger of fire and electric shock.



Never touch the plug while your hands are wet. Doing so creates the danger of electric shock. Pulling on the cord can damage it, break the wiring, or cause short, creating the danger of fire and electric shock.

Never touch the printer head and the platen.

TK-3200 User's Manual 5

Introduction & Contents	2
Remove the cash register from its box.	
Remove the tape holding parts of the cash register in place	
Getting Started	
Install receipt/journal paper.	
Plug the cash register into a wall outlet.	
Insert the mode key into the mode switch.	
Turn the mode key to the "REG" position.	
Set the date.	
Set the time.	
Tax table programming	
Introducing TK-3200	
General guide	
Display	
Keyboard	
Allocatable functions	
How to remove/replace the sheet holder	
How to install a menu sheet in the sheet holder	
Basic Operations and Setups	
How to read the printouts	
How to use your cash register	
,	
Assigning a clerk	
Clerk button Clerk secret number key	
Displaying the time and date	
To display and clear the date/time	
Preparing coins for change	
Preparing and using department/flat-PLU keys	
Registering department/flat-PLU keys	
Programming department/flat-PLU keys	
To program a unit price for each department/flat-PLU	
To program the tax calculation status for each department/flat-PLU	
To program high amount limit for each department/flat-PLU	
Registering department/flat-PLU keys by programming data	
Preset price	
Preset tax status	
Locking out high amount limitation	
Preparing and using PLUs	
Programming PLUs	
To program a unit price for each PLU	
To program tax calculation status for each PLU	
Registering PLUs	
Preparing and using discounts	
Programming discounts	
Registering discounts	
Discount for items and subtotals	
Preparing and using reductions	
Programming for reductions	
To program preset reduction amount	
Registering reductions	
Reduction for items	
Reduction for subtotal	
Registering credit and check payments	
Check	
Charge	
Mixed tender (cash, charge and check)	


validation printing		
Total amount validation		
Validation sample		
Registering both the Euro and local currency		
Registering returned goods in the REG mode		
Registering returned goods in the RF mode		
Normal refund transaction		
Reduction of amounts paid on refund		
Registering money received on account		
Registering money paid out		
Making corrections in a registration		
To correct an item you input but not yet registered		
To correct an item you input and registered		
To cancel all items in a transaction		
No sale registration		
Printing the daily sales reset report		
Advanced Operations		56
Stock check	5	6
Clerk interrupt function	5	6
Single item cash sales	5	7
Addition	5	8
Addition (plus)		
Premium (%+)		
Tray total		
Tray total premium/discount		
Multiple item totalling function		
Coupon transactions		
Coupon registration using <coupon> (coupon key)</coupon>	6	31
Coupon registration using <coupon2> (coupon 2 key)</coupon2>	6	61
Preset tender amount	6	2
Registering loan amounts	6	2
Registering pick up amounts	6	3
Changing media in drawer		
Bottle link operation		
Bottle returns		
Bottle return key		
Arrangement key registrations	6	5
Set menu		
Currency exchange function		
Registering foreign currency		
Full amount tender in foreign currency		
Partial tender in a foreign currency		
Tips		
Inputting the number of customers		
Temporarily releasing compulsion		
Text recall		
Printing slip		
Printing slips		
To perform auto batch printing 1		
To perform auto batch printing 2		
About the maximum number of slip lines		
Check tracking systems		
Check tracking system		
Opening a check		
Adding to a check		

Issuing a guest receipt	
Closing a check memory	
New/old check key operation	
Add check	
Price reductions (red price)	
· · ·	
Condiment/preparation PLUs	
VAT breakdown printing	
Deposit registrations	
Deposit from customer Deposit from customer during sales transaction	
Bill copy	
• •	
Actual stock quantity inquiry	
Unit price inquiry	
Previous item void using <review></review>	
Scanning PLU	
Item registration	
By scanner/code input/one touch NLU key	
Not found PLU	
Programming to clerk	
Programming clerk number	
Programming trainee status	
Programming descriptors and massages	
Programming descriptors and messages	
Programming receipt message, machine No. and clerk name Programming department/transaction key descriptor	
Programming flat-PLU descriptor	
Entering characters	
Using character keyboard	
Entering characters by code	
Character code list	
Editing characters	
Correcting a character just entered	
Correcting and adding a PLU descriptor already set	
Correcting a key descriptor already set	
Correcting a message descriptor already set	93
Printing read/reset reports	94
To print the individual department, PLU/flat-PLU read report	94
To print the financial read report	95
To print the individual clerk read/reset report	
To print the daily sales read/reset report	
To print the PLU/flat-PLU read/reset report	
To print the hourly sales read/reset report	
To print the monthly sales read/reset report	
To print the group read/reset report	
To print the periodic 1/2 sales read/reset reports	
To print other sales read/reset reports	
Reading the cash register's program	
To print unit price/rate program (except PLU/scanning PLU)	
To print the PLU/flat-PLU program	
To print the PLU/flat-PLU program	
roubleshooting	
When an error occurs	
Clearing a machine lock up	
When the register does not operate at all	
In case of nower failure	100

User Maintenance	
To replace journal paper	110
To replace receipt paper	111
To replace the ink ribbon	
To replenish the stamp ink	
Options	113
Specifications	
Index	

This section outlines how to unpack the cash register and get it ready to operate. You should read this part of the manual even if you have used a cash register before. The following is the basic set up procedure, along with page references where you should look for more details.

Remove the cash register from its box. Make sure that all of the parts and accessories are included.

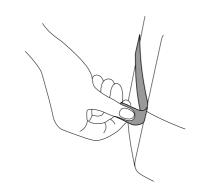

Remove the tape holding parts of the cash register in place.


> Also remove the small plastic bag taped to the printer cover. Inside you will find the mode keys.

Install receipt/journal paper.

Refer to page $11 \sim 13$.

Loading receipt paper

The same type of paper ($45 \text{ mm} \times 83 \text{ mm i.d.}$) is used for receipts and journal. Load the new paper before first operating the cash register or when red paper appears from the printer.

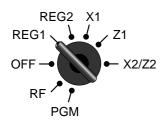

Step 1

Use a mode key to set the mode switch to REG1 position.



Step 2

Open the printer cover.



Step 3

Cut off the leading end of the paper so it is even.



Step 5

Drop the paper roll gently and insert paper to the paper inlet.



Step 4

Ensuring the paper is being fed from the bottom of the roll, lower the roll into the space behind the printer.



Step 6

Press the FEED key until about 20 cm to 30 cm of paper is fed from the printer.



Complete

Set the printer cover, passing the leading end of the paper through the paper outlet. Close the printer cover and tear off the excess paper.


Important!

Never operate the cash register without paper. It can damage the printer.

TK-3200 User's Manual 11 E

Loading journal paper

The same type of paper (45 mm \times 83 mm i.d.) is used for receipts and journal. Load the new paper before first operating the cash register or when red paper appears from the printer.

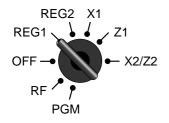

Step 1

Use a mode key to set the mode switch to REG1 position.



Step 2

Open the printer cover.



Step 5

Drop the paper roll gently and insert paper to the paper inlet.



Step 3

Cut off the leading end of the paper so it is even.



Step 6

Press the FEED key until about 20 cm to 30 cm of paper is fed from the printer.



Step 4

Ensuring the paper is being fed from the bottom of the roll, lower the roll into the space behind the printer.



Step 7

Slide the leading end of the paper into the groove on the spindle of the take-up reel and wind it onto the reel two or three turns.



Step 8

Place the take-up reel into place behind the printer, above the roll paper.



Step 9

Press the FEED key to take up any slack in the paper.



Complete

Close the printer cover.


Important!

Never operate the cash register without paper. It can damage the printer.

TK-3200 User's Manual 13 🗉




4_ Plug the cash register into a wall outlet.

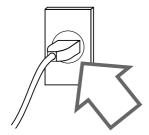


Be sure to check the sticker (rating plate) on the side of the cash register to make sure that its voltage matches that of the power supply in your area.

Insert the mode key marked "PGM" for U.K. or marked "OW" for other area into the mode switch.

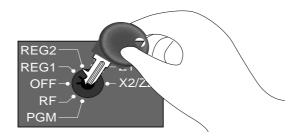


Turn the mode key to the "REG" position.


The display should change to the following.

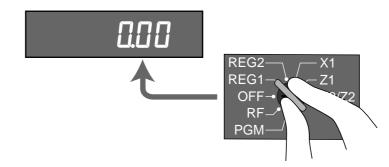

Set the date.

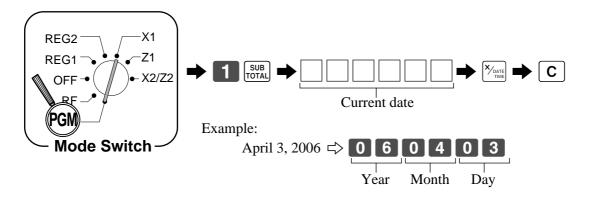

Set the time.

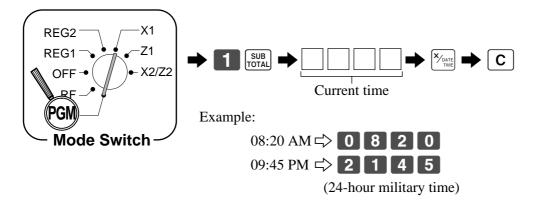

TK-3200 User's Manual 15 🗉

Tax table programming

This cash register is capable of automatically calculating up to 10 different sales taxes. The sales tax calculations are based on rates, so you must tell the cash register the rates, the type of tax (add-in or addon), and the type of rounding to apply. Note that special rounding methods (page 18) are also available to meet certain local tax requirements.

Important!


After you program the tax calculations, you also have to individually specify which departments (page 38) and PLUs (page 40) are to be taxed.


Programming tax calculations (without special rounding)

Prepare the following subjects:

- 1. Tax rates
- 2. Rounding method for tax calculation (Round up/Round off/Cut off)
- 3. Tax calculation system (Add-on/Add-in)

Programming procedure

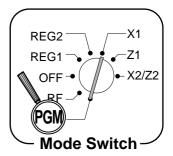

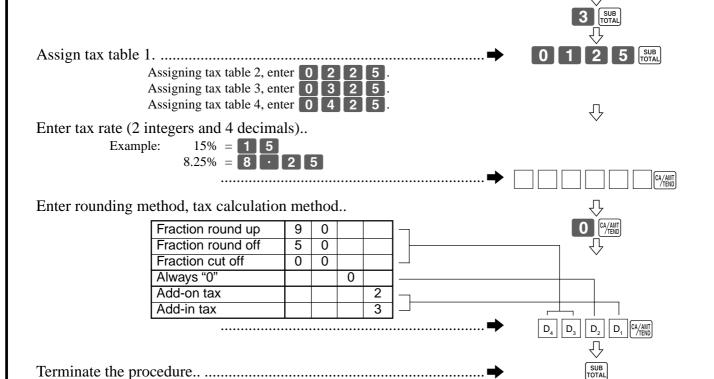


Programming tax calculations (with special rounding)

Prepare the following subjects:

- 1. Tax rates
- 2. Rounding method for tax calculation (Round up/Round off/Cut off)
- 3. Tax calculation system (No/Add-on/Add-in)
- 4. Rounding system (Special rounding 1/Special rounding 2/Special rounding 3/Danish rounding /Australian rounding) :only effective for Tax Table 1

Programming procedure

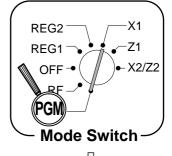

3 SUB TOTAL

亇

CA/AMT TEND

Assign tax table 1.


Assigning tax table 2, enter 0 2 2 5.

Assigning tax table 2, enter 0 2 2 5.
Assigning tax table 3, enter 0 3 2 5.
Assigning tax table 4, enter 0 4 2 5.

Enter tax rate (2 integers and 4 decimals)

Example: 15% = 15 $8.25\% = 8 \cdot 25$ non tax = 0

Enter rounding method, tax calculation method..

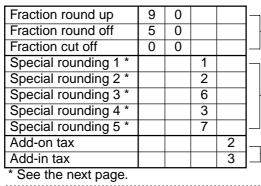

Terminate the procedure.

O CA/ANT

D₄ D₃ D₂ D₁ CA/ANT

//FEND

TK-3200 User's Manual 17 🗉

About special rounding...

Besides cut off, round off and round up, you can also specify "special rounding" for subtotals and totals or changes. Special rounding converts the right-most digit(s) of an amount to "0" or "5" to comply with the requirements of certain areas.

1 Special Rounding 1

Last (right-most) digit		Rounding result	Examples:		
0 ~ 2	\Rightarrow	0	1.21	→	1.20
3 ~ 7	\Rightarrow	5	1.26	→	1.25
8 ~ 9	ightharpoonup	10	1.28	→	1.30

2 Special Rounding 2

Last (right-most) digit		Rounding result	Examples:		
0 ~ 4	\Rightarrow	0	1.12	→	1.10
5 ~ 9	\Rightarrow	10	1.55	→	1.60

(3) Special Rounding 3

Last (right-most) 2 digits		Rounding result	Examples:		
00 ~ 24	\Rightarrow	0	1.24	→	1.00
25 ~ 74	\Rightarrow	50	1.52	→	1.50
75 ~ 99	\Rightarrow	100	1.77	→	2.00

(4) Special Rounding 4 (Danish Rounding)

With Danish rounding, the rounding method applies to subtotals depends on whether you finalize the transaction by inputting an amount tendered or not.

· When a finalization is performed without an amount tendered entry

•	When a finalization is performed with
	an amount tendered entry

Last (right-most) 2 digits of subtotal		Rounding result	Last (right-most) 2 digits of change due	R	Counding result
00 ~ 12	\Rightarrow	00	00 ~ 12	\Rightarrow	00
13 ~ 37	\Rightarrow	25	13 ~ 37	\Rightarrow	25
38 ~ 62	\Rightarrow	50	38 ~ 62	\Rightarrow	50
63 ~ 87	\Rightarrow	75	63 ~ 87	\Rightarrow	75
88 ~ 99	\Box	100	88 ~ 99	\Box	100

(5) Special Rounding 5 (Australian Rounding)

Last (right-most) digit		Rounding result	Examples:		
0 ~ 2	\Rightarrow	0	1.21	→	1.20
3 ~ 7	\Rightarrow	5	1.26	→	1.25
8 ~ 9	\Rightarrow	10	1.28	→	1.30

Partial tenders (payments): for Danish Rounding

No rounding is performed for the amount of tendered nor for the change amount due when the customer makes a partial tender. When a partial tender results in a remaining balance within the range of 1 through 12, the transaction is finalized as if there was no remaining balance.

Display and printing of subtotals: for Danish and Australian Rounding


When you press the [SUB | Key, the unrounded subtotal is printed and shown on the display. If the cash register is also set up to apply an add-on tax rate, the add-on tax amount is also included in the subtotal that is printed and displayed.

Important!

When you are using Danish rounding, you can use the [a/AMI] key to register tendered amount in which the last (right-most) digits are 00, 25, 50 or 75. This restriction does not apply to the ch and chk keys.

10. For Australia only

You can set some programmable options to suit the Australian GST by the following procedure.

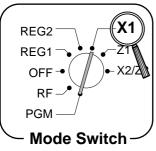




After completion of this procedure, the "GST system was changed" message was printed on receipt and;

- 1 Tax symbol (*) is printed.
- 2 Taxable amount is skipped.
- ③ "GST INCLUDED" is set to the TX1 descriptor.
- ④ "TAXABLE AMT" is set to the TA1 descriptor.
- 5 Total line is printed even in direct (cash) sale.
- 6 Australian rounding is set.
- (7) "\$" is set to the monetary symbol.
- ® Print "MOF message" on receipt.
- (9) Tax (10% tax rate, add-in tax, fraction round off) is set to the tax table 1. No data is set to other tax tables.
- ① The taxable amount and tax amount except TA1/TX1 are not printed on report.
- (1) Restriction (to 0, 5) on last amount digit of cash sales, received on account, paid out, and money declaration.

TK-3200 User's Manual 19 E

General guide

This part of the manual introduces you to the cash register and provides a general explanation of its various parts.

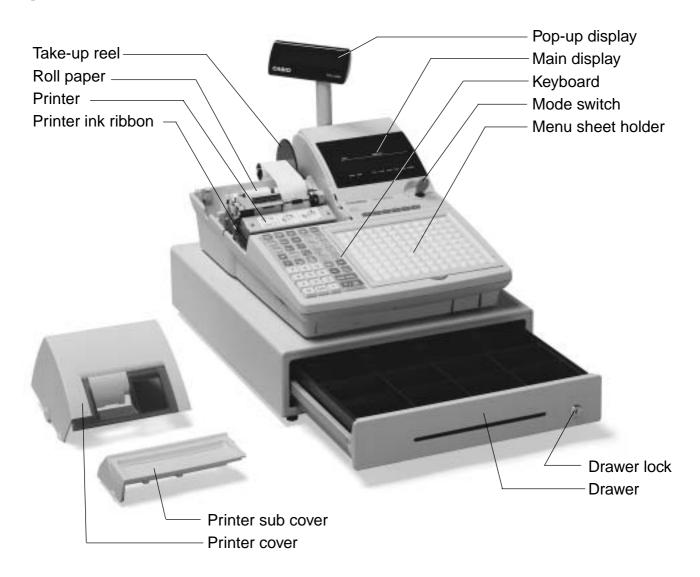

Roll paper


You can use the roll paper to print receipts and a journal (pages 11 ~ 13).

Receipt on/off switch

Use the receipt on/off switch in REG1, REG2 and RF modes to control issuance of receipts. In other modes, receipts or reports are printed regardless the receipt switch setting.

A post-finalization receipt can still be issued after finalization when the switch is set to off. The cash register can also be programmed to issue a post-finalization receipt even when the switch is set to on.


Receipt on/off switch

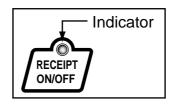

When the register issues receipts, this indicator is lit.

Mode key (for U.K.)


The following four types of mode keys are provided with the unit in the United Kingdom.

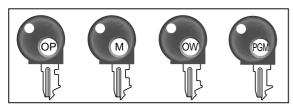

- a. OP (Operator) key Switches between OFF and REG1.
- b. M (Master) key Switches between OFF, REG1, REG2, X1 and RF.
- c. OW (Owner) key Switches between OFF, REG1, REG2, X1, Z1, X2/ Z2 and RF.
- d. PGM (Program) key Switches to any position.

Mode key (for other area)

The following three types of mode keys are provided with the unit in areas outside of the United Kingdom.

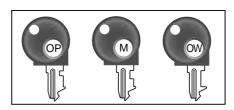


- a. OP (Operator) keySwitches between OFF and REG1.
- b. M (Master) key Switches between OFF, REG1, REG2, X1 and RF.
- c. OW (Owner) key Switches to any position.

TK-3200 User's Manual 21 E

Mode switch

Use the mode keys to change the position of the mode switch and select the mode you want to use.

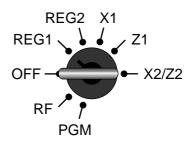

Mode switch	Mode name	Description	
OFF	Stand-by	Any of the mode control keys can be inserted and removed from the mode switch in this position.	
REG1	Register 1	Used for normal sales transactions. Any of the mode control keys can be inserted and removed from the mode switch in this position.	
REG2	Register 2	Used for special operations. Since switching to REG2 requires a special key, such functions as discounts, credit sales, charge sales, check payments, and paid outs can be controlled by programming them as prohibited in REG1 and allowed in REG2.	
RF	Refund Reg minus	Used for processing refunds. When the mode switch of the register is in RF position, you can access either the refund mode or the register minus mode.	
X1	Daily sales read	Used to obtain daily reports without resetting (clearing) all total data.	
Z1	Daily sales reset	Used to obtain daily reports while resetting (clearing) all total data.	
X2/Z2	Periodic sale read/ reset	Used to obtain periodic sales reports without resetting total data or while resetting all total data.	
PGM	Program	Used when programming functions and preset data such as unit prices and tax rates. Also used when reading program data.	

Clerk key/button

You can assign clerks or cashiers by using clerk button or by clerk secret number. The method you are assigning clerk depends on the programming of your cash register.

Clerk button

You can assign the clerk or cashier using the six buttons located below the display panel.

Clerk secret number key

When the cash register is programmed to use clerk secret numbers for clerk or cashier assignment, the clerk buttons are not functional.





Drawer


The drawer opens automatically whenever you finalize a registration and whenever you issue a read or reset report.

Drawer lock

Use the drawer key to lock and unlock the drawer.

When the cash drawer does not open!

In case of power failure or the machine is in malfunction, the cash drawer does not open automatically. Even in these cases, you can open the cash drawer by pulling drawer release lever (see below).

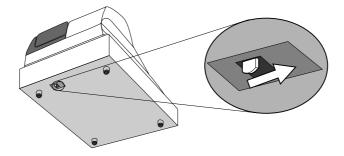

Important!


The drawer will not open, if it is locked with a drawer lock key.

TK-3200 User's Manual 23 E

Display

Display panel

Main display

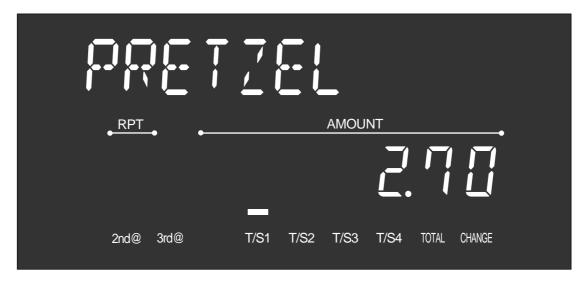

Customer display



Display example

Item registration



Repeat registration



Totalize operation



1 Amount/Quantity

This part of the display shows monetary amounts. It also can be used to show the current time.

2 Item descriptor

When you register a department/PLU/scanning PLU, the item descriptor appears here.

3 Number of repeats

Anytime you perform a repeat registration (pages 36, 41), the number of repeats appears here. Note that only one digit is displayed for the number of repeats. This means that a "5" could mean 5, 15 or even 25 repeats.

(4) 2nd, 3rd menu indicator

When you press PRICE to designate the 2nd/3rd unit price, the corresponding number is displayed.

(5) Taxable sales status indicators

When you register a taxable item, the corresponding indicator is lit.


(6) Change descriptor/amount


(7) Total/Change indicators

When the TOTAL indicator is lit, the displayed value is monetary total or subtotal amount. When the CHANGE indicator is lit, the displayed value is the change due.

TK-3200 User's Manual 25 E

Keyboard

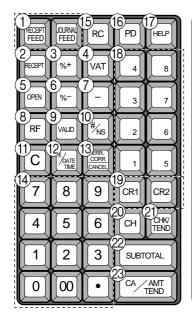

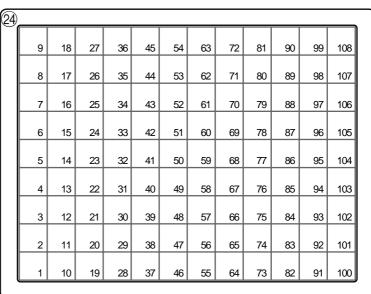

• Register Mode

- 1) Paper feed key | RECEIPT |, JOURNAL | FEED |
 - Hold this key down to feed paper from the printer.
- 2 Post receipt key RECEIPT
 - Press this key to produce a post-finalization receipt.
- ③ Premium key | %+

Use this key to apply a preset % or manual input % to obtain the premium amount for the last registered item or subtotal.

- (4) VAT key VAT
 - Use this key to print a VAT breakdown.
- 5 Open OPEN

Use this key to temporarily release a limitation on the number of digits that can be input for a unit price.

6 Discount key | %-

Use this key to register discounts.

(7) **Minus** | **–**

Use this key to input values for subtraction.

(8) **Refund key** | RF

Use this key to input refund amounts and void certain entries.

9 Validation VALID

Use this key to validate transaction amounts on slip.

(10) Non-add/No sale key |#/NS|

Non-add key: To print reference number (to identify a personal check, credit card, etc.) during a transaction, use this key after some numerical entries.

No sale key: Use this key to open the drawer without registering anything.

(1) Clear key C

Use this key to clear an entry that has not yet been registered.

12 Multiplication/DateTime key | *\frac{\sqrt{parte}}{\text{rime}}

Use this key to input a quantity for a multiplication

Between transactions, this key displays the current time and date.

(13) Error correction/Cancellation key CANCEL

Use this key to correct registration errors and to cancel registration of entire transactions.

- **14** Ten key pad $[0, 1] \sim [9, 00]$ Use these keys to input numbers.
- (15) Received on account key | RC |

Use this key following a numeric entry to register money received for non-sale transactions.

(6) Paid out key | PD

Use this key following a numeric entry to register money paid out from the drawer.

Use this key to convert the main currency to the sub currency (the euro/the local money), when registering a subtotal amount. This key is also used for specifying sub currency while entering an amount of payment or declaration in drawers.

17 Help key |HELP|

Use this key to look up the procedures to set date/time, tax table etc.

(18) Department keys | 1 |, | 2 |, $| 3 | \sim | 8 |$ Use these keys to register items to departments.

27 E

19 Credit key CR1 CR2

Use this key to register a credit sale.

② Charge key CH

Use this key to register a charge sale.

21) Check key CHK/

Use this key to register a check tender.

22 Subtotal key SUB TOTAL

Use this key to display and print the current subtotal (includes add-on tax) amount.

Use this key to register a cash tender.

24 Flat PLU key 001, 002, ~

Use these keys to register items to flat PLUs.

TK-3200 User's Manual

Allocatable functions

You can tailor a keyboard to suit your particular type of business.

Use this key in a check tracking system to combine the details of more than one check into a single check.

Arrangement

Use this key to activate an arrangement program programmed in the arrangement file. Any operation that can be performed from the keyboard, as well as mode, can be programmed in an arrangement program, and can be performed merely by pressing this key. In addition, one numeric entry can be included in an arrangement program. In this case, input the number and press this key.

The mode control function of this key can be programmed for all modes except for the OFF and PGM mode.

Bill copy

Use this key to issue bill copy.

Bottle return

Use this key to specify next item as bottle return.

Cancel

Invalidates all preceding data registered for departments, PLUs and set menus within a transaction. This key must be pressed before the transaction involving the data to be invalidated is finalized. It is also effective even after calculation of subtotal amount.

Check endorsement

Use this key to print a preset check endorsement message using the slip printer.

Check print

Use this key to print the check on the slip printer.

Clerk number

Use this key to sign clerk on and off the register.

Clock-in/-out

Use this key to register the time when the employees start/ finish their job.

Coupon

Use this key for registering coupons.

Coupon 2

Use this key to declare the next item registration as coupon.

Cube

This key provides the same functions as the Square key. In addition, this key also has a cube multiplication function.

Currency exchange

Use this key to convert foreign currency to local currency or vice versa using the exchange rate preset for the key and displays the result.

Use this key for conversions of a home currency subtotal or merchandise subtotal to equivalent of another country's

Use this key for conversions of another country's currency to the equivalent of the home currency.

Customer number

Use this key to register the number of customers.

Declaration

Use this key to declare in drawer amount for money declaration.

Deposit

Use this key to register deposits.

Eat-in

Use this key to specify if the customer eats in the restaurant. Before closing a transaction press this key.

This key is used to input the amount of money provided for making change. This operation affects media totals, rather than sales totals. Loans are made for all types of money which can be specified by the finalize key.

Manual tax

Use this key to register a tax amount.

Media change

Use this key to change media in drawer amount. Pressing this key enters media change operation.

Menu shift

Use this key to shift key to the 1st ~ 6th menu.

Merchandise subtotal

Use this key to obtain subtotal excluding the add-on tax amount and the previous balance.

Multiplication/For

Use this key to input a quantity for a multiplication operation and registration of split sales of packaged items. Between transactions, this key displays the current time and date.

New balance

Use this key for adding the latest registered total amount to the previous balance to obtain a new balance.

Use this key in a check tracking system to input a new check number in order to open a new check under that number.

New/Old check

Use this key in a check tracking system to input check numbers in order to open new checks and to reopen existing checks. When the clerk inputs a check number, the register checks to see if that number already exists in the check tracking memory. If there is no matching number in the memory, a new check is opened under the input number. If the check number input matches a number already stored in the memory, that check is reopened for further registration or finalization.

Use this key to open the drawer between transaction.

Non add

Use this key to print reference numbers (personal check number, card number, etc.)

OBR (Optical barcode reader)

Use this key to input optical barcodes manually.

Old check

Use this key in a check tracking system to input the number of an existing check (previously created by the New check key) whose details are stored in the check tracking memory. Existing checks are reopened to perform further registration or to finalize them.

One touch NLU

Use this key to register scanning PLU directly from the keyboard. There is one One touch NLU key for one scanning PLU, and multiple one touch NLU keys can be set on the keyboard.

Open 2

Use this key to suspend the compulsory specifications.

Open check

Use this key to issue an open check report of an assigned clerk.

Operator number

Use this key to enter a clerk number during clerk transfer.

Operator X/Z

Use this key to issue a clerk's individual X/Z report.

Pick up

When the amount in drawer exceeds the limit value (sentinel function), the manager performs a pick up operation. This key is used for this function. This operation affects media totals, rather than sales totals. Pick ups are made for all types of money which can be specified by the finalize key.

PLU

Use this key to input PLU numbers.

Plus

Use this key for registering surcharge.

Previous balance

Use this key to register the previous negative/positive balance at the beginning of or during a transaction.

Previous balance subtotal

Use this key to obtain subtotal excluding the add-on tax amount and current balance.

Price

Use this key to register an open PLU.

Price change

Use this key to change scanning PLU unit price temporarily.

Price inquiry

Use this key to confirm the price and descriptors of PLU without registering.

Price shift

Use this key to shift a scanning PLU to the 1st ~ 3rd unit price.

Rate tax

Use this key to activate the preset tax rate or manually input rate to obtain the tax for the preceding taxable status 1 amount.

Recall

Use this key for recalling the transferred check number by the store key. When this key is pressed, the check number will appear in order of the oldest record.

Red price

Use this key to register a new (discounted) price of an item.

Review

Use this key to examine the current transaction by displaying item descriptor and registered amount. This key is also used for void operation or separate check operation.

Separate check

Use this key in a check tracking system to separate selected items from one check to another check.

Slip feed/release

Use this key to feed slips inserted into the slip printer. This is done by specifying the number of feed lines. This key is also used to release the slip paper holder if numbers are not entered.

Slip back feed/release

Use this key to back feed slips inserted into the slip printer. This is done by specifying the number of feed lines. This key is also used to release the slip paper holder if numbers are not entered.

Slip print

Use this key to execute a slip batch printing on the slip printer. Pressing this key prints the sales details. Actual printing is performed following receipt issuance.

Square

This key provides the same functions as the Multiplication key. In addition, this key also has a square multiplication function.

Stock inquiry

Use this key to check the current stock quantity for a PLU without registering.

Store

Use this key for storing the check number of the registered items. When this key is pressed, registered item data will be stored, and then these data will transfer to the youngest check number.

Table number

Use this key to input table numbers.

Takeout

Use this key to specify if the customer takes out items. Before total a transaction. Press this key for the tax exemption.

Tax exempt

Use this key to change taxable amounts to nontaxable amounts.

Tax status shift 1

Use this key to change the Taxable 1 status of the next item.

Tax status shift 2

Use this key to change the Taxable 2 status of the next item.

Taxable amount subtotal

Use this key to obtain taxable amount subtotal.

Text print

Use this key to enter characters to print.

Text recall

Use this key to print preset characters.

Tip

Use this key to register tips.

Tray total

Use this key to display the total amount for all registrations from the last registration until this key is pressed or registrations between presses of this key.

Void


Use this key to invalidate preceding item data registered.

TK-3200 User's Manual 29 E

How to remove/replace the sheet holder


Remove the sheet holder

Follow steps $1 \sim 2$.

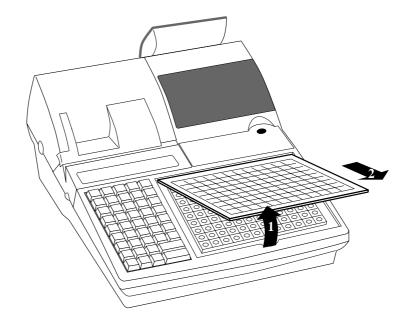

Replace the sheet holder

Follow steps $3 \sim 4$.

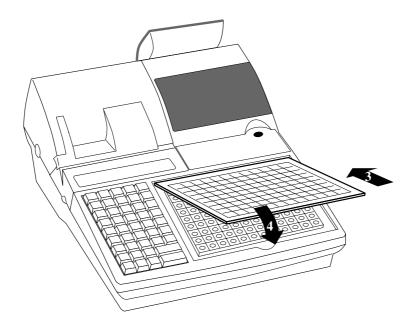


Introducing TK-3200

How to install a menu sheet in the sheet holder


Open the sheet holder

Follow the steps $1 \sim 3$.

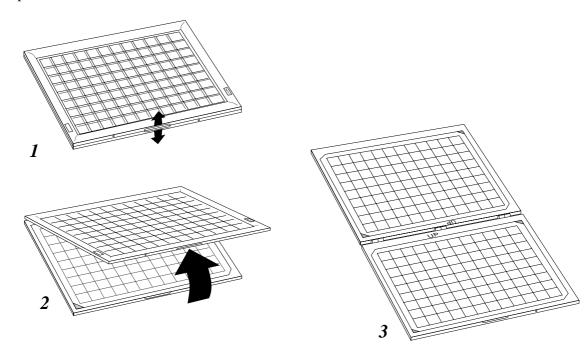

Set a menu sheet in the sheet holder

Follow the steps $4 \sim 6$.

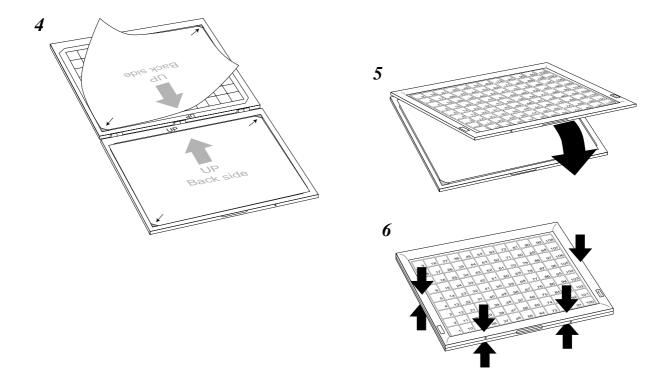


TK-3200 User's Manual 31 E

How to read the printouts

- The journal and receipts are records of all transactions and operations.
- The contents printed on receipts and journal are almost identical.
- You can choose the journal skip function.

If the journal skip function is selected, the cash register will print the total amount of each transaction, and the details of premium, discount and reduction operations only, without printing department and PLU item registrations on the journal.

- The following items can be skipped on receipts and journal.
 - Consecutive number
 - Taxable status
 - Taxable amount
 - Item counter

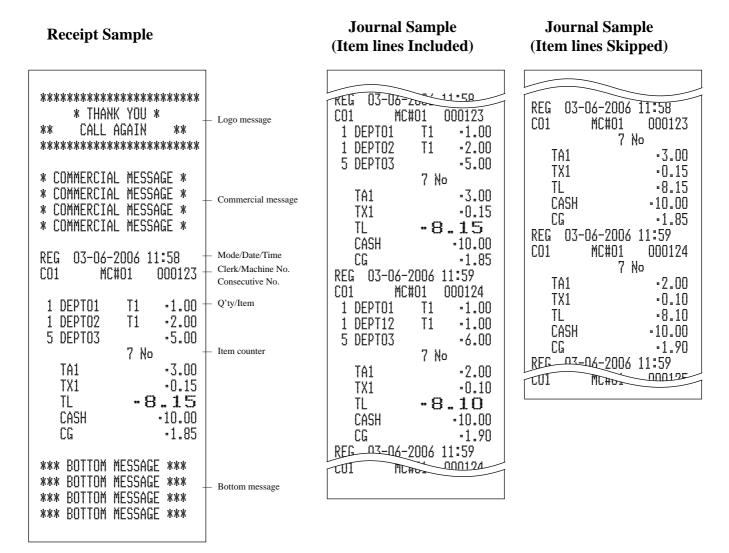


In the operation examples contained in this manual, the print samples are what would be produced if the roll paper is being used for receipts. They are not actual size. Actual receipts are 45 mm wide. Also, all sample receipts and journals are printout images.

How to use your cash register

The following describes the general procedure you should use in order to get the most out of your cash register.

BEFORE business hours...

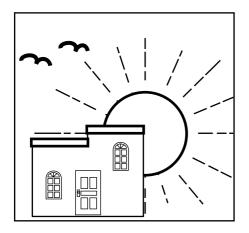


- Check to make sure that the cash register is plugged in securely. Page 14
- Check to make sure there is enough paper Pages 11 ~ 13 left on the roll.
- Read the financial totals to confirm that they are all zero. Page 95
- Check the date and time. Page 35

DURING business hours...

- Register transactions.
- Periodically read totals.

Page 36

Page 94

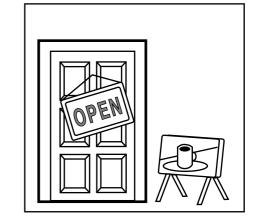

AFTER business hours...



- Page 55 Reset the daily totals.
- Page 110 Remove the journal.
- Empty the cash drawer and leave it open. Page 23
- Take the cash and journal to the office.

TK-3200 User's Manual 33 E



Assigning a clerk



You can assign clerks by using clerk button or by clerk secret number.

The method you of assigning clerk depends on the programming of your cash register.


Clerk button

You can assign the clerk or cashier using the six buttons located below the display panel.

Clerk secret number key


When the cash register is programmed to use clerk secret numbers for clerk or cashier assignment, the clerk buttons are not functional.

Clerk sign on

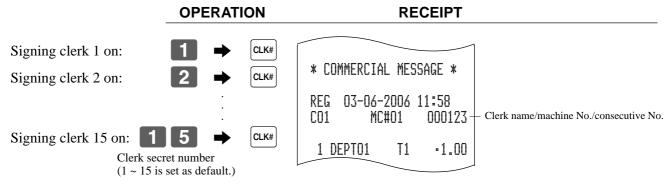

• If you do not want the clerk secret number to be shown on the display, press CLK# before entering the number.

Clerk sign off

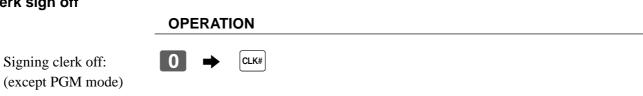

• The current clerk is also signed off whenever you set the mode switch to OFF position.

Important!


- The error code "E008" appears on the display whenever you try to perform a registration, a read/ reset operation without signing on.
- A clerk cannot sign on unless other clerk is signed off.
- The signed on clerk is also identified on the receipt/journal.

Displaying the time and date



You can show the time or date on the display of the cash register whenever there is no registration being made.

To display and clear the date/time

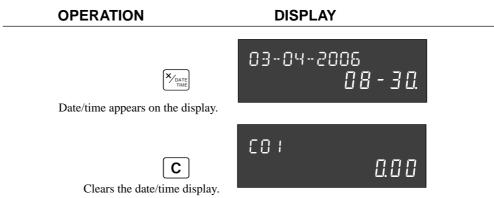

Preparing coins for change



You can use the following procedure to open the drawer without registering an item. This operation must be performed out of a sale.

(You can use the RC key instead of the key. See page 51.)

Opening the drawer without a sale



TK-3200 User's Manual 35 E


Preparing and using department/flat-PLU keys


Registering department/flat-PLU keys

REG Mode switch The following examples show how you can use the department/flat-PLU keys in various types of registrations.

Single item sale

Example 1

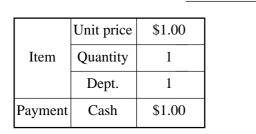


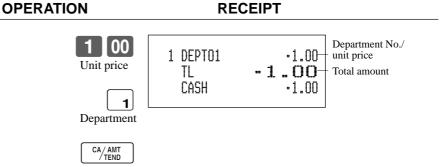



Example 2 (Subtotal registration and change computation)



RECEIPT

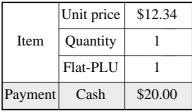

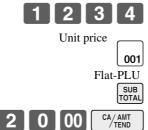

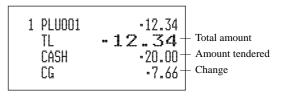


Amount tendered


Repeat

OPERATION


RECEIPT

	Unit price	\$1.50
Item	Quantity	3
	Dept.	1
Payment	Cash	\$10.00

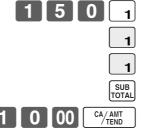


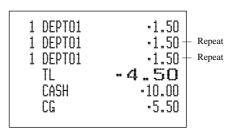

Multiplication

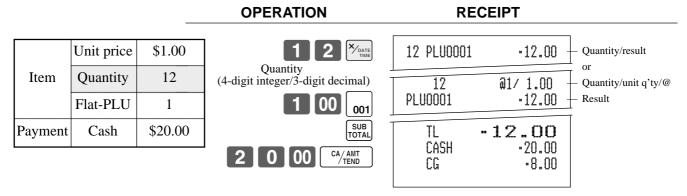


Split sales of packaged items

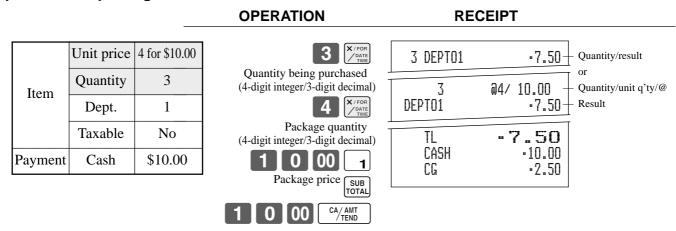

• If \[\int_{\text{pure}}^{\text{X/FOR}} \] is not allocated on the keyboard, key allocation is necessary.

Programming department/flat-PLU keys

To program a unit price for each department/flat-PLU

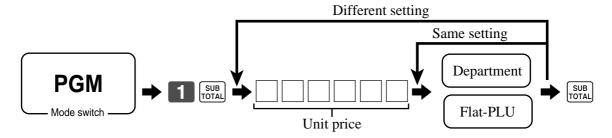

To program the tax calculation status for each department/flat-PLU

Tax calculation status

This specification defines which tax table should be used for automatic tax calculation.

TK-3200 User's Manual 37 E

Programming procedure



Description	Choice	Program code
-------------	--------	--------------


for Singapore

Always "0"			0 D ₂
Taxable 1 status	a	Yes = 1 No = 0	
Taxable 2 status	b	Yes = 2 No = 0	a+b+c D ₁
Taxable 3 status	с	Yes = 4 No = 0	

for other area

Non tax $= 0$	Taxable $4 = 4$	Taxable $8 = 8$		
Taxable $1 = 1$	Taxable $5 = 5$	Taxable $9 = 9$	Significant	
Taxable $2 = 2$	Taxable $6 = 6$	Taxable $10 = 10$	numbers	
Taxable $3 = 3$	Taxable $7 = 7$			

To program high amount limit for each department/flat-PLU

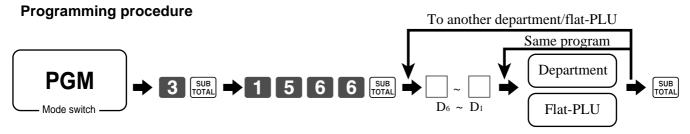

Description	Choice	Program code
High amount limit for entering unit price manually.	Significant numbers	$D_6 \sim D_1$

Basic Operations and Setups

Registering department/flat-PLU keys by programming data




Preset price

OPERATION

RECEIPT


	Unit price	(\$1.00) _{preset}
Item	Quantity	1
	Dept.	2
Payment	Cash	\$1.00

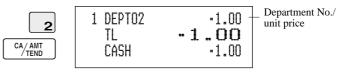



Preset tax status

OPERATION

RECEIPT

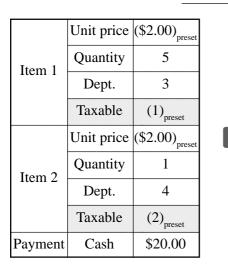

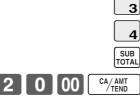

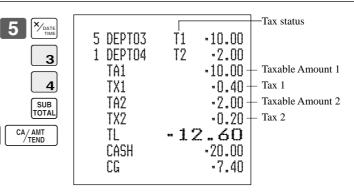


Locking out high amount limitation

OPERATION

RECEIPT

	Unit price	\$1.05
Item	Quantity	1
	Dept.	3
	Max.amount	(\$10.00) _{preset}
Payment	Cash	\$2.00

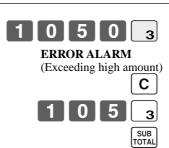

2 00

1	DEPTO3 TL CASH CG	·1.05 • 1 . 05 ·2.00 ·0.95

TK-3200 User's Manual 39 E

Preparing and using PLUs

This section describes how to prepare and use PLUs.

Note


• If PLU is not allocated on the keyboard, key allocation is necessary.

CAUTION:


Before you use PLUs, you must first program the unit price and tax status.

Programming PLUs

To program a unit price for each PLU

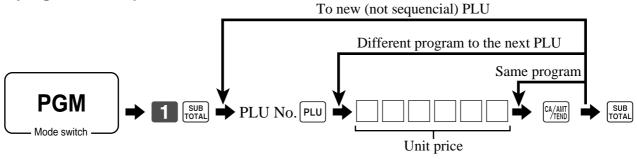



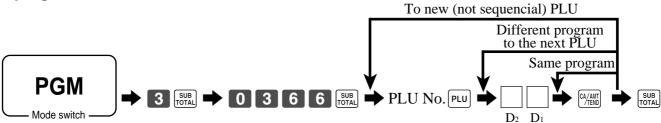

Description	Choice	Program code
-------------	--------	--------------

for Singapore

Always "0"			0 D ₂
Taxable 1 status	a	Yes = 1 $No = 0$	
Taxable 2 status	b	Yes = 2 No = 0	a+b+c D ₁
Taxable 3 status	с	Yes = 4 No = 0	

for other area


Non tax = 0 Taxable 1 = 1 Taxable 2 = 2 Taxable 3 = 3	Taxable 4 = 4 Taxable 5 = 5 Taxable 6 = 6 Taxable 7 = 7	Taxable $8 = 8$ Taxable $9 = 9$ Taxable $10 = 10$	Significant numbers	
--	---	---	---------------------	--

Registering PLUs




The following examples show how you can use PLUs in various types of registrations.


PLU single item sale

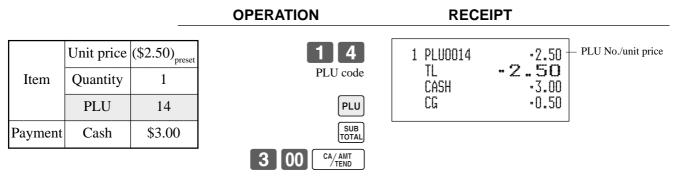

PLU repeat

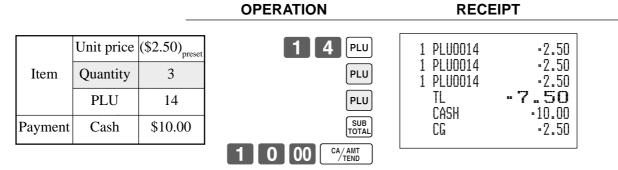


PLU multiplication

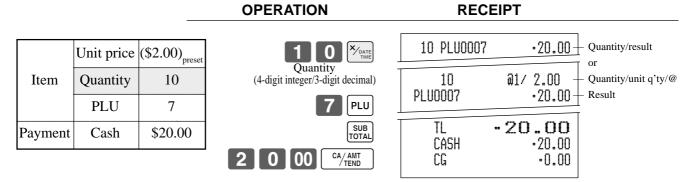

TK-3200 User's Manual 41 E


Basic Operations and Setups

Split sales of packaged item

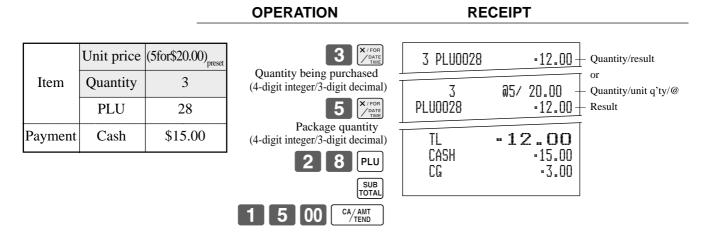

• If $\begin{bmatrix} x & FOR \\ part \end{bmatrix}$ is not allocated on the keyboard, key allocation is necessary.

Open PLU

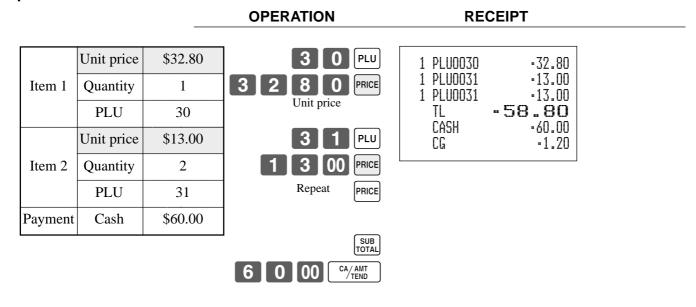


• Before registering an open PLU, it is necessary to preset it as an open PLU.

Preparing and using discounts

This section describes how to prepare and register discounts.

Programming discounts



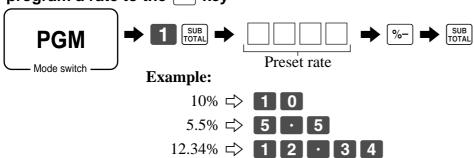

Registering discounts



The following example shows how you can use the $\fintrimeth{\mbox{\mbox{$\mbox{w}}}}-$ key in various types of registration.

Discount for items and subtotals

RECEIPT OPERATION Dept. 1 \$5.00 1 DEPT01 T1 -5.00 1 PLU0016 T2 -10.00 Item 1 Quantity PLU 5% $(1)_{\text{preset}}$ **%**--T7 -0.50 Taxable ST -14.50 Applies the preset discount (\$10.00)_{prese} **PLU 16** 3.5% rate to the last item registered. 7--0.51Item 2 SUB TOTAL Quantity 1 TA1 -5.00 $(2)_{\text{preset}}$ -0.20 TX1 Taxable %-TA2 -9.50 The input value takes priority $(5\%)_{\text{preset}}$ Discount Rate TX2 ·0.48 of the preset value. TL 14.67 Rate 3.5% Subtotal CASH -15.00 discount Taxable CG .0.33 Nontaxable

• You can manually input rates up to 4 digits long (0.01% to 99.99%).

\$15.00

Taxable status of the %- key

Cash

Payment

- Whenever you perform a discount operation on the last item registered, the tax calculation for discount amount is performed in accordance with the tax status programmed for that item.
- Whenever you perform a discount operation on a subtotal amount, the tax calculation for the subtotal amount is performed in accordance with the tax status programmed for the [%-] key.

TK-3200 User's Manual 43 🗉


Preparing and using reductions

This section describes how to prepare and register reductions.

Programming for reductions

You can use the [-] key to reduce single item or subtotal amounts.

To program preset reduction amount

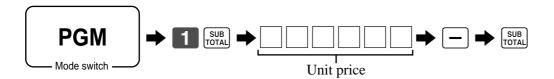

Registering reductions



The following examples show how you can use the [-] key in various types of registration.

Reduction for items

Dept. 1 \$5.00 Item 1 Quantity 1 Reduces the last amount Taxable $(1)_{\text{preset}}$ registered by the value input. Reduction Amount \$0.25 (\$6.00)_{prese} PLU 45 Item 2 Quantity 1

Taxable

Amount

Cash

Reduction

Payment



OPERATION

1	DEPT01	T1	-5.00
		T1	-0.25
1	PLU0045	T1	-6.00
		T1	-0.50
	TA1		·10.25
	TX1		-0.41
	TL	-10	0.66
	CASH		-11.00
	CG		-0.34

RECEIPT

You can manually input reduction values up to 7 digits long.

 $(1)_{\text{preset}}$

(\$0.50)_{pres}

\$11.00

If you want to subtract the reduction amount from the department or PLU totalizer, program "Net totaling."


Basic Operations and Setups

Reduction for subtotal

OPERATION

RECEIPT

Item 1	Dept. 1	\$3.00
	Quantity	1
	Taxable	(1) _{preset}
Item 2	Dept. 2	\$4.00
	Quantity	1
	Taxable	(2) _{preset}
Subtotal	Amount	\$0.75
Reduction	Taxable	(No) _{preset}
Payment	Cash	\$7.00
	•	•

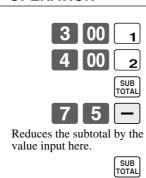

1 DEPTO1 1 DEPTO2 - TA1 TX1 TA2 TX2 TL CASH	T1 ·3.00 T2 ·4.00 -0.75 ·3.00 ·0.12 ·4.00 ·0.20 -6.57 ·7.00
ΓASH	•7 NN
CG	•0.43

TK-3200 User's Manual 45 🗉

Registering credit and check payments

The following examples show how to register credits and payments by check.

REG

Mode switch

Check

OPERATION RECEIPT


Item	Dept. 1	\$11.00
Item	Quantity	1
Payment	Check	\$20.00

Charge

OPERATION RECEIPT

	Dept. 4	\$15.00	
Item	Б ерг. 4	\$15.00	
	Quantity	1	
Reference	Number	1234	
Payment	Charge	\$15.00	



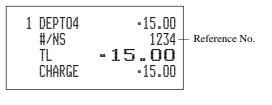

Mixed tender (cash, charge and check)

OPERATION

RECEIPT

Item	Dept. 4	\$55.00
Item	Quantity	1
Payment	Check	\$30.00
	Cash	\$5.00
	Charge	\$20.00



CHARGE •20.00	1	DEPTO4 TL CHECK CASH CHARGE	-55.00 -55.00 -30.00 -5.00 -20.00
---------------	---	---	---

Validation printing

REG

- Mode switch

You can perform total amount validation following finalization using $^{\text{CA/ABIT}}$, $^{\text{CH}}$, $^{\text{CHK}}$, $^{\text{CR1}}$, $^{\text{CR2}}$ keys and $^{\text{RC}}$, $^{\text{PD}}$ keys. Also you can perform single item validation.

Total amount validation


OPERATION

RECEIPT


Item	Dept. 1	\$14.00	
Item	Quantity	1	
Payment Check \$20.00			
Validation			



CG -6.00		DEPTO1 TL CHECK CG	·14.00 • 14.00 ·20.00 ·6.00
----------	--	-----------------------------	--------------------------------------

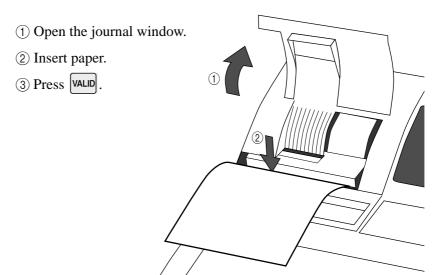

Validation sample

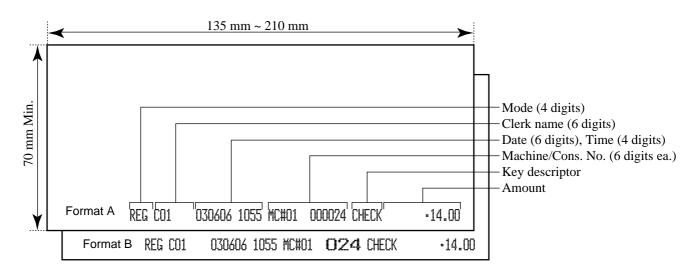

TK-3200 User's Manual 47 E

Registering both the Euro and local currency

REG

Mode switch

The following example shows the basic operation using the currency exchange function between the Euro and the local currency.

Case A

Main currency	Local
Payment	Euro
Change	Local
Rate	1 Euro = 0.5 FFr

OPERATION DISPLAY

6 0 0

Press the PD key, which converts the subtotal amount PD into the sub currency by applying the preset exchange SUB TOTAL

After you press the TOTAL key, the result is shown on the

PD Press the PD key if you enter the payment in the sub currency.

1 5 00

CA/AMT TEND

Press the [CA/ANT] key to finalize the transaction. The change amount is shown in the programmed currency.

12.00E

0.00E

15.008

RECEIPT

1 DEPT01 -6.00 -6.00 TL (€12.00) EURO money CASH €15.00 (.7.50)CASH CG -1.50 (€3.00)

Case B


Main currency	Euro
Payment	Local
Change	Euro
Rate	1 Euro = 0.5 FFr

OPERATION DISPLAY



PD Press the PD key, which converts the subtotal amount into the sub currency by applying the preset exchange rate.

After you press the $\lceil SUB \rceil$ key, the result is shown on the display.

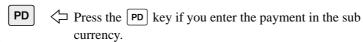

6 00

Press the (A/AIII) key to finalize the transaction.

The change amount is shown in the programmed currency.

0.00L 6.00L 0.00

RECEIPT

1	DEPTO:	€12.00
	LOCAL CASH CASH CG	(-6.00) money -6.00 (€12.00) €0.00 (-0.00)

TK-3200 User's Manual 49 🗉

Registering returned goods in the REG mode

REG

Mode switch


The following example shows how to use the RF key in the REG mode to register goods returned by customers.

OPERATION

RECEIPT

Item 1	Dept. 1	\$2.35
	Quantity	1
Item 2	Dept. 2	\$2.00
Item 2	Quantity	1
Item 3	PLU 1	(\$1.20) _{preset}
Item 5	Quantity	1
Returned	Dept. 1	\$2.35
Item 1	Quantity	1
Returned	PLU 1	(\$1.20) _{preset}
Item 3	Quantity	1
Payment	Cash	\$2.00

2	3	5	1
	2	00	2
		1	PLU
			RF
2	3	5	

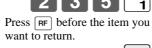



1 DEPTO1	-2.35
1 DEPTO2	-2.00
1 PLU0001	-1.20
. RF	
1 DEPTO1	-2.35
RF	
1 PLU0001	-1.20
TL	-2.00
CASH	-2.00

Registering returned goods in the RF mode

RF


Mode switch


The following examples show how to use the RF mode to register goods returned by customers.


Normal refund transaction

OPERATION

RECEIPT

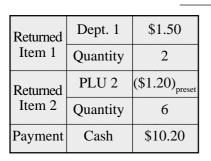

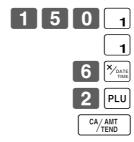

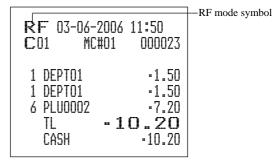


Reduction of amounts paid on refund

OPERATION

RECEIPT

Returned Item 1	Dept. 3	\$4.00
	Quantity	1
Reduction	Amount	\$0.15
Returned Item 2	PLU 2	(\$1.20) _{preset}
	Quantity	1
Discount	Rate	(5%) _{preset}
Payment	Cash	\$4.99

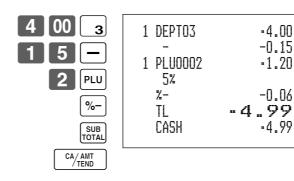

Important!

• To avoid miss registrations in the RF mode, return the mode switch to the former position immediately.

Registering money received on account

REG

- Mode switch

The following example shows how to register money received on account. This registration must be performed out of a sale.

OPERATION

RECEIPT

Received amount	\$700.00



RC •700.00

Registering money paid out

REG

- Mode switch -

The following example shows how to register money paid out from the register. This registration must be performed out of a sale.

OPERATION

RECEIPT



1 5 0 PD

PD •1.50

Amount can be up to 8 digits.

TK-3200 User's Manual 51 E

Making corrections in a registration

REG


Mode switch

There are three techniques you can use to make corrections in a registration.

- To correct an item that you input but not yet registered.
- To correct the last item you input and registered.
- To cancel all items in a transaction.

To correct an item you input but not yet registered

OPERATION RECEIPT

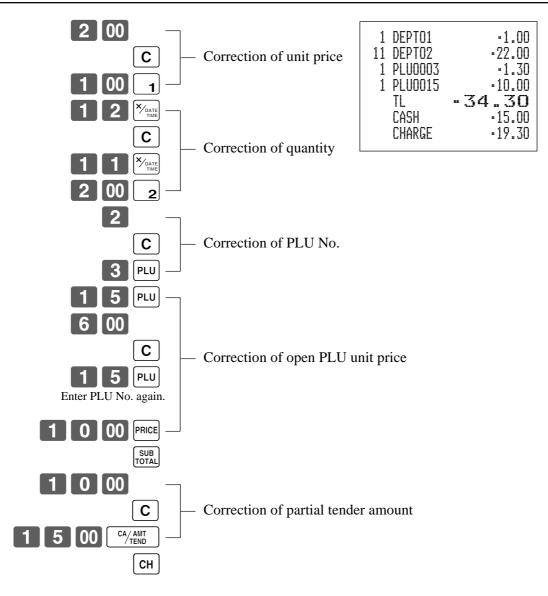

To correct an item you input and registered

СН

OPERATION RECEIPT 1 DEPT01 -1.00 1 DEPT02 -2.00 00 1 PLU0005 -1.50 PLU0015 -10.00 2 Clearance DEPT04 -24.00 ST -38.50 5% 2 PLU **%**--1.93Correction of PLU No. RF 1 DEPTO2 -2.20 5 PLU 37 TL -15.00 CASH 5 PLU -19.37 CHARGE 00 PRICE Correction of open ERR CORR. Corrected items are not printed on receipt. PLU unit price PLU 00 PRICE 4 00 4 Correction of quantity 6 ×/DATE 4 00 %-Correction of discount SUB TOTAL %-2 00 2 Correction of refund item ERR CORR. 2 SUB 0 00 Correction of partial tender ERR CORR. CA/AMT TEND 5 00

TK-3200 User's Manual 53 E

To cancel all items in a transaction

OPERATION RECEIPT 1 DEPT01 -1.00 -2.00 1 DEPTO2 1 DEPTO3 -3.00 1 DEPT04 -4.00 CANCEL Pressing [SUB] key is necessary to cancel the transaction.

No sale registration

REG


Mode switch

You can use the following procedure to open the drawer without registering a sale. This operation must be performed out of a sale.

OPERATION RECEIPT #_{NS} #/NS

Printing the daily sales reset report

This report shows daily sales totals.

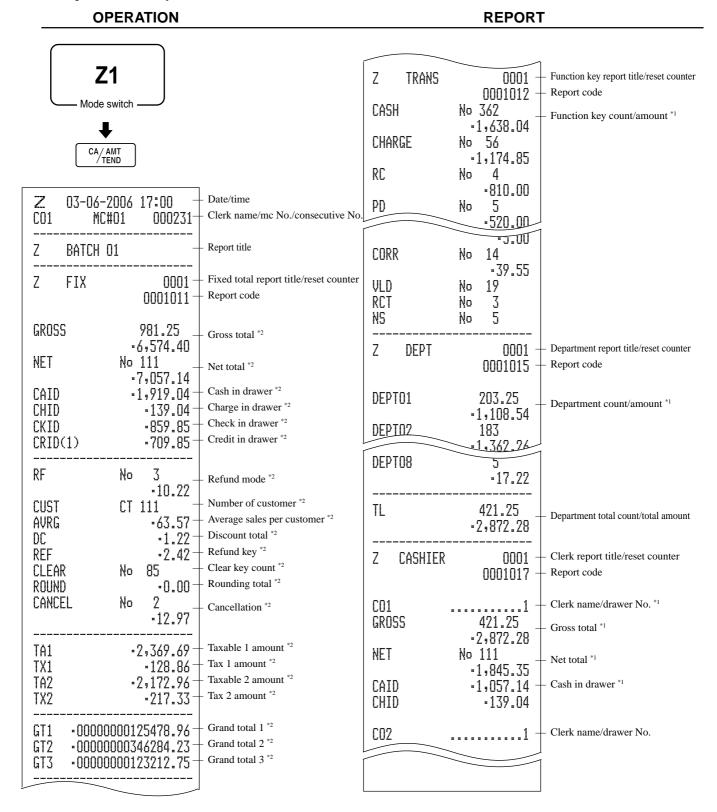

^{*1} Zero totalled departments/functions/clerks are not printed by programming.

TK-3200 User's Manual 55 E

^{*2} These items can be skipped by programming.

This chapter describes more sophisticated operations that you can use to suit the needs of your retail environment.

Stock check

Each PLU has an actual stock totalizer that you can program with a minimum stock quantity. Then the register checks actual stock quantities against the programmed minimum stock quantities. Stock operations are performed only for PLUs programmed with minimum stock quantities.

Stock warnings

The cash register checks for negative values in actual stock quantities during the registration itself. After registration is complete, it checks actual stock quantities against minimum stock quantities. The following warning indicators are used to inform the operator of any problem.

Negative stock:

This indicates that the actual stock quantity is negative. You can also program the cash register to treat this condition as an error. This warning does not appear when the actual stock quantity is zero.

• Under minimum stock:

This indicates that the actual stock quantity is less than or equal to the minimum stock quantity. The cash register can be programmed so that a buzzer sounds when the actual stock quantity is less than the minimum stock quantity.

Notes

- The stock check operation is also performed for PLUs programmed with minimum stock quantities that make up set menus.
- None of the warning indicators appear unless the cash register is specifically programmed for the stock check
- Stock operations can be performed for registrations in the RF mode or those performed with <REFUND> (the refund key).
- An error correct, void, or cancel operation restores the original of items in stock value.

Clerk interrupt function

There are two types of clerk interrupt function, illustrated by PROCEDURE 1 and PROCEDURE 2 below.


- In PROCEDURE 1, each clerk possesses a unique clerk interrupt buffer, and so the clerk interrupt function gives each individual clerk the ability to perform an independent registration operation. In this case, each clerk is individually linked to a unique clerk interrupt buffer.
- In PROCEDURE 2, multiple clerks use the same clerk interrupt buffer, and so a single clerk interrupt operation (clerk change during registration) can be performed any registration is in progress. In this case, multiple clerks are linked to a single clerk interrupt buffer.

Note the following important points concerning the clerk interrupt function.

- The register must be programmed to allow use of the clerk interrupt function.
- To use the clerk interrupt function, a clerk interrupt buffer must first be allocated with the memory allocation operation. Next the manager control operation (X1 mode) should be used to perform clerk assignment for the clerk interrupt function. The clerk interrupt operation cannot be performed by clerks who are not linked to a clerk interrupt buffer.
- You cannot use the clerk interrupt function on a register set up to function as part of a check tracking system. In the REG1, REG2, and RF modes, clerks can be change while a transaction is in progress, making it possible for multiple clerks to simultaneously perform registrations using a single register.

For example, if clerk 1 is interrupted while registering a transaction, clerk 2 can use the same machine to register a different transaction. Then clerk 1 can continue the original registration from the point where it was interrupted.

PROCEDURE 1

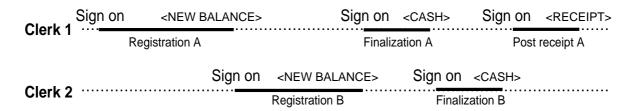

PROCEDURE 2

Sign	on <new bal<="" th=""><th>ANCE></th><th>Sign on</th><th><cash></cash></th></new>	ANCE>	Sign on	<cash></cash>
Clerk	Registration A			tion A + B
2 1.1.0	S	ign on <new bala<="" th=""><th></th><th></th></new>		
Clerk 2 ····· NOTES		Registration B		

- A guest receipt can be issued following clerk change, and receipts can be issued separately for each clerk.
- A cancel operation can be performed during registration by either of the clerks. When clerk 1 signs back on (after being interrupt by clerk 2), the cancel operation cancels only the items registered after signing back on (only this receipt) or from the top of the transaction. This is selectable by the key program.

Single item cash sales

A department key or PLU programmed with single item sale status finalizes the transaction as soon as it is registered.

The single item sales function cannot work properly if the keyboard does not include <CASH> (the cash key). The single item sales function can only be used for cash sales.

Example 1

			OPERATION	RECI	EIPT	
	Dept. 1	\$1.00	1 00 1	1 DEPTO1 TL	·1.00 -1.00	Department No./ unit price
Item	Quantity	1	The transaction is immediately finalized.	CASH	•1.00 \pm	- Cash total amount
	Status	S.I.S	111111111111111111111111111111111111111			
Payment	Cash	\$1.00				

TK-3200 User's Manual 57

Example 2

OPERATION

RECEIPT

	Dept. 1	(\$1.00)
Item	Quantity	3
	Status	S.I.S
Payment	Cash	\$3.00



The transaction is immediately finalized.


3	DEPT01	-3.00
	TL	-3.00
	CASH	-3.00

Example 3

OPERATION

RECEIPT

	Dept. 3	\$2.00
Item 1	Quantity	1
	Status	Normal
	Dept. 1	(\$1.00)
Item 2	Quantity	1
	Status	S.I.S
Payment	Cash	\$3.00

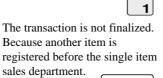

2 00

<u>3</u>

1 DEPTO3 -2.00 1 DEPTO1 -1.00 TL -3.00 CASH -3.00

Addition

Addition (plus)

Example

OPERATION

RECEIPT

	Dept. 1	\$1.00
Item 1	Quantity	1
	Addition	\$0.10
	Dept. 1	\$2.00
Item 2	Quantity	3
	Addition	$3 \times (\$0.20)$
Payment	Cash	\$7.70





-0.10 -6.00 -0.60
7.70 -7.70


Premium (%+)

Example

OPERATION

RECEIPT

	Dept. 1	\$1.00
Item 1	Quantity	1
	Premium	10%
Item 2	Dept. 1	\$2.00
Item 2	Quantity	3
Subtotal	Premium	(15%)
Payment	Cash	\$8.17

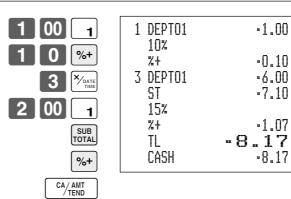

TK-3200 User's Manual 59 🗉


Tray total

Tray total premium/discount

The buffer memory stores all items that fall into the prescribed range, starting from the first item registered for a transaction up to the point that <TRAY TOTAL> (the tray total key) is pressed to perform a tray total premium/discount operation. Following a premium/discount operation, the buffer is cleared and storage of new data starts from registration of the next item following the first premium/discount operation. The following operations clear the buffer memory.

- Press <TRAY TOTAL> twice.
- Press <TRAY TOTAL> and then perform a premium/discount operation. The contents of the buffer memory are restored if an error correction operation is performed to delete the premium/discount operation.


Example

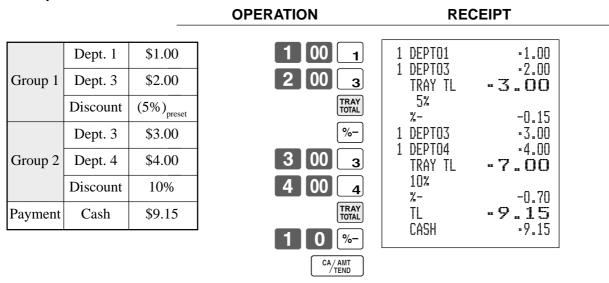

Multiple item totalling function

This function accumulates all items registered from the first item registered up to point that <TRAY TOTAL> is pressed, or all items between two presses of <TRAY TOTAL>. Pressing <TRAY TOTAL> displays the total amount with the tax included and prints it on the receipt and journal (printing on receipt and journal is programmable.)

Example

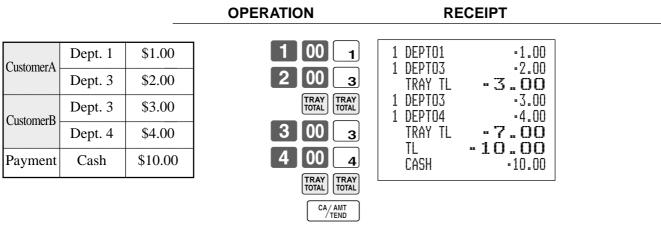

Advanced Operations

Coupon transactions

Note that errors result when the result of a calculation is negative if the cash register is programmed to prohibit credit balances.


Coupon registration using <COUPON> (coupon key)

Example

OPERATION RECEIPT Dept. 1 \$3.00 2 DEPT01 -6.00 COUPON -1.00Item 1 2 Quantity 1 DEPT03 -4.00 COUPON -1.00Χ $$0.50 \times 2$ Coupon TL -8.00 CPN Dept. 3 \$4.00 CASH .8.00 1 Item 2 Quantity 3 CPN (\$1.00)Coupon CA/AMT TEND Payment Cash \$8.00

Coupon registration using <COUPON2> (coupon 2 key)

Example

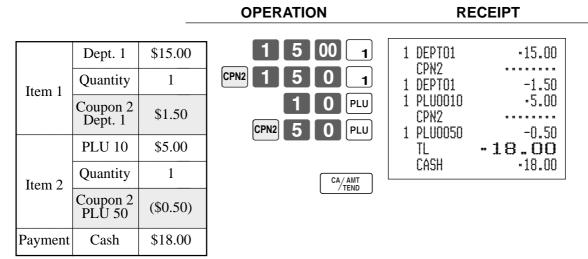

TK-3200 User's Manual 61 E

Preset tender amount

An amount up to six digits long can be programmed to <CASH> (cash/amount tendered key). Then, when <CASH> is pressed without inputting a value, the programmed value is automatically registered and the transaction is finalized. When an amount is programmed to <CASH>, attempting to manually input an amount results in an error.

RECEIPT

-8.00

-10.00

-2.00


-8.00

OPERATION

Example 1

8 00 1 DEPTO1 Dept. 1 \$8.00 Item TL Quantity 1 CASH CG The preset amount is tendered. Cash (\$10.00)Payment


Example 2

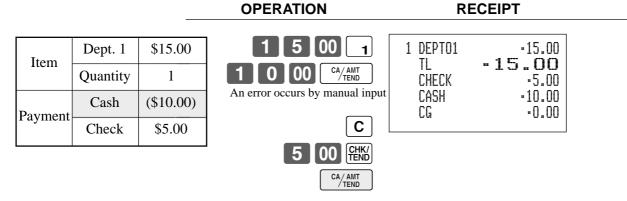


Registering loan amounts



Use this procedure to register loan or bank received from the office.

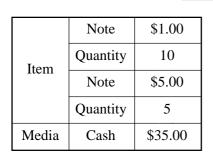

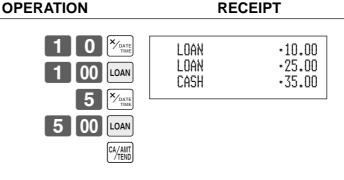

Advanced Operations

Registering pick up amounts

Use this procedure to register pick up money from cash drawer.


REG

Mode switch

OPERATION

RECEIPT

	Coin	\$0.50
Item	Quantity	10
Item	Coin	\$0.10
	Quantity	5
Media	Cash	\$5.50

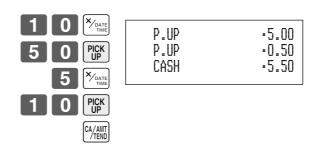

Changing media in drawer

REG

Mode switch

Use this procedure to change media in drawer.

OPERATION

RECEIPT

	Check	-10.00
Media	Cash	\$8.00
	Charge	\$2.00







MEDIA CHG	
CHECK	-10.00
CASH	-8.00
CHARGE	-2.00

TK-3200 User's Manual

Bottle link operation

You can link PLU to a PLU.

Example

PLU 1 (\$8.00)Item 1 PLU 11_{linked} (\$0.80)1 Quantity PLU 2 (\$5.00)PLU 12_{linked} Item 2 (\$0.50)3 Quantity Payment Cash \$30.00

			1	PLU
			3	X/DATE TIME
			2	PLU
3	0	00	CA	/ AMT TEND

OPERATION

	PLU0001 PLU0011 PLU0002	•8.00 •0.80 •15.00
- 3	PLU0012	-1.50
	TL	-25.30
	CASH	-30.00
	CG	•4.70

RECEIPT

Bottle returns

Bottle return key

You can use the linked bottle return key to register a bottle return. A PLU whose programmed unit price represents the contents of the bottle, can be linked with PLU whose programmed unit price represents the deposit on the bottle. In the following example, the bottle return key has been programmed to operate as a linked bottle return key.

The bottle return key must be pressed before input of each new linked bottle return.

Example

PLU 1 (\$8.00)Return Item 1 PLU 11_{linked} (\$0.80)1 Quantity PLU 2 (\$5.00)Return Item 2 PLU 12_{linked} (\$0.50)3 Quantity Cash \$2.30 Payment



OPERATION



	BR	
1	PLU0011	-0.80
	BR	
3	PLU0012	-1.50
	TL	-2.30
	CASH	-2.30

RECEIPT

Arrangement key registrations

Key operations can be assigned to an <ARRANGE> (arrangement key). Then, simply pressing <ARRANGE> performs all of the key functions assigned to it.

ARR


Key operations can also be assigned to an address code. Then, when you input the address code using <ARRANGE>, all of the key functions assigned to the address code are performed.

Example 1

OPERATION

RECEIPT

Arrangement 1			
Item 1	PLU 1	(\$8.00)	
	Quantity	1	
Item 2	PLU 2	(\$5.00)	
Item 2	Quantity	1	
Payment	Cash	\$13.00	

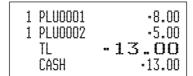

Example 2

OPERATION

RECEIPT

Arrangement 5			
Item 1	Dept 1	\$1.00	
	Quantity	1	
Item 2	Dept 2	\$2.00	
	Quantity	1	
Payment	Cash	\$3.00	



1 DEPTO1	-1.00
1 DEPTO2	-2.00
I L Cash	-3.00 -3.00
СНЭП	.2.00


Set menu

When you register a set menu, its total amount is added to the PLU totalizer and counter. The price of each set menu item is also added to each respective PLU totalizer and counter.

Example

OPERATION

RECEIPT

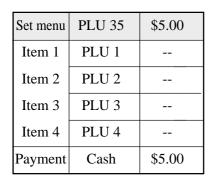



1 PLU0035	-5.00
PLU0001	
PLU0002	
PLU0003	
PLU0004	
TL	-5.00
CASH	-5.00

Currency exchange function

When <CE> (currency exchange key) is pressed, a current subtotal including tax is converted directly into foreign currency and the result is displayed, and the subsequent finalization is handled using the foreign currency. The currency exchange function is released by finalizing a transaction, partial tender operation, receipt issuance, or by pressing <SUBTOTAL>.

Before using the currency exchange function, it is necessary to program the conversion rate.


Registering foreign currency

Full amount tender in foreign currency

* Pre-programmed exchange rate: \forall 100 = \\$0.9524

Important!

Tenders in a foreign currency can be registered using the [CAMAN] and [CHK] only. Other finalize keys cannot be used.

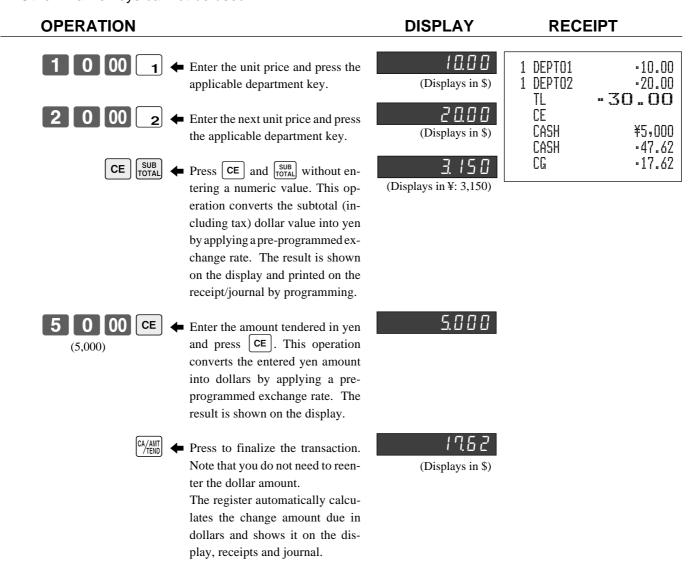

Partial tender in a foreign currency

* Pre-programmed exchange rate: ¥ 100 = \$0.9524

Important!

Partial tender in a foreign currency can be registered using and emb only. Other finalization keys cannot be used, but the remaining tender can be finalized using any finalize key.

OPERATION		DISPLAY	RECEIPT
1 0 00 1	← Enter the unit price and press the applicable department key.	(Displays in \$)	1 DEPTO1 ·10.00 1 DEPTO2 ·20.00 TL •30.00
2 0 00 2	← Enter the next unit price and press the applicable department key.	(Displays in \$)	CE CASH ¥2,000 CASH •19.05
CE SUB TOTAL	← Press CE and SUB without entering a numeric value. This operation converts the subtotal (including tax) dollar value into yen by applying a pre-programmed exchange rate. The result is shown on the display and printed on the receipt/journal by programming.	3. 15 [] (Displays in ¥: 3,150)	CHECK ·10.95
2 0 00 CE	← Enter the partial amount tendered in yen and press CE. This operation converts the entered yen amount into dollars by applying a pre-programmed exchange rate. The result is shown on the display.	2.000	
CA/AMT/TEND	Press CA/AMT to specify cash tender for the yen partial tender. Note that you do not need to reenter the dollar amount. The register automatically deducts the dollar equivalent of the yen amount tendered from the total amount due and shows the amount on the display.	(Displays in \$)	
CHK/ TEND	← Press to finalize the transaction.	10.95	

TK-3200 User's Manual 67 🗉

(Displays in \$)



Example

			OPERATION	RECEIPT	
Item 1	Unit price Dept.	\$3.00	3 00 1 5 00 2	1 DEPT01 -3.00 1 DEPT02 -5.00 TIP -0.80	
Item 2	Unit price	\$5.00	SUB TOTAL	TL -8.80 CASH ·10.00	
Item 2	Dept.	2	8 0 TIP	CG •1.20	
Tip	Amount	\$0.80	1 0 00 CA/AMT		
Payment	Cash	\$10.00			


Inputting the number of customers

Example 1

OPERATION

RECEIPT


Item 1	Unit price	\$15.00
Item 1	Dept.	1
Item 2	Unit price	\$5.00
	Dept.	2
Customer	Number	2
Payment	Cash	\$20.00

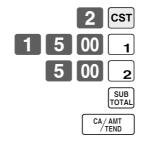

fermit fermit	CT DEPTO1 DEPTO2 TL CASH	2 •15.00 •5.00 • 20.00 •20.00

Example 2


You can only use the following operation to re-input the number of customers when <CUSTOMER> (customer number key) is preset to allow re-input. When programming prohibits re-input of the number of customers, this operation causes an error.

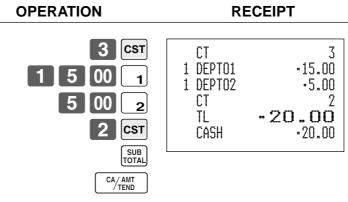

You can re-input the number of customers either immediately after the initial input or during later registration.

Example 3

You can use the following operation to add customers to an original number of customers input (when addition to the number of the customer is allowed).

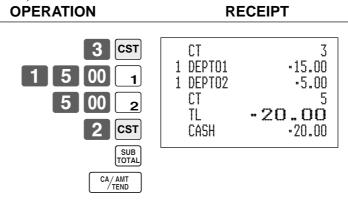

TK-3200 User's Manual 69 E

Text recall


This procedure is used to recall text by inputting the address where the text is stored. The recalled text is printed on the receipt and journal.

Example

OPERATION

RECEIPT

Item 1	Unit price	\$46.00
Item 1	Dept.	1
Item 2	Unit price	\$10.00
Item 2	Dept.	2
Payment	Cash	\$56.00
Text 1	MEDIUM SIZE	
Text 2	SMALL SIZE	

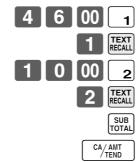

CT 1 DEPT01 MEDIUM SIZE 1 DEPT02 SMALL SIZE TL CASH	3 •46.00	
	-10.00	
	-56.00 -56.00	


Temporarily releasing compulsion

<PEN 2> (open 2 key) can be programmed to release specific compulsion.

Example 1

OPERATION

RECEIPT

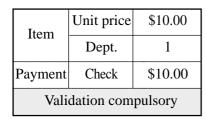







Validation compulsory



Validation compulsory is temporarily released.

Example 2

OPERATION

RECEIPT

Input customer No. compulsory		
Item	Unit price	\$10.00
Hem	Dept.	1
Payment	Check	\$10.00

	0	00	1
Input custom	ner No.	compu	ilsor



1	DEPT01	-10.00
	TL	-10.00
	CHECK	-10.00

Compulsory is temporarily released.



Printing slip

To perform batch printing on the slip printer, you must first use the memory allocation operation (see program 5 mode in the dealer's manual) to reserve slip buffer memory. The capacity of the slip buffer memory is determined by the number of units of slip buffer memory reserved by the memory allocation operation. The register can be programmed to check the status of the registration buffer memory whenever slip batch printing is performed, and sound an alarm when the buffer memory is almost full. The alarm sounds when there are 12 lines or less remaining, and once it starts to sound, the only operation you can perform is the cancel operation or operations using one of the following keys.

- <CA/AMT TEND> (cash/amount tendered key) operation
- <CH> (charge key) operation
- <CHK/TEND> (check tendered key) operation
- <DEPOSIT> (deposit key) operation
- <NEW BALANCE> (new balance key) operation
- <SUBTOTAL> (subtotal key) operation

You must perform one of above operations when the registration buffer alarm sounds. Any other operations results in an error.

Printing slips

The cash register can be connected to the optional SP-1300 slip printer, which features an automatic feed function and automatic back feed function.

Automatic feed function

This function makes it possible to program the number of line feeds that should be inserted from the normal print start position before starting slip printing of a new slip. Even if line feeds are programmed for this function, they are not inserted for validation printing, check endorsement printing, and check printing performed using the slip printer. Note also that line feeds are not inserted automatically at the beginning of a second slip when the transaction requires printing that extends from one slip to another.

Automatic back feed function

This function performs automatic back feed following slip printing, validation printing, and endorsement printing on the slip printer. The slip paper is released once the back feed operation is complete.

Manual feed function

<SLIP FEED/RELEASE> (slip feed/release key: assigned to the register's keyboard using the program 4 mode) can be used for manual feed of the slip paper. You perform manual feed by inputting a value for the number of lines (up to two digits in the range of 1 to 99) and then press <SLIP FEED/RELEASE>.


Manual back feed function

<SLIP BACK FEED/RELEASE> (slip back feed/release key: assigned to the register's keyboard using the program 4 mode) can be used for manual back feed of the slip paper. Manual back feed can be performed by inputting a value for the number of lines (up to two digits in the range of 1 to 99) and then press <SLIP BACK FEED/RELEASE>.

You can print slips using automatic or manual batch printing. The slip print operation can be performed in REG1, REG2, and RF modes only.

Finalizing a registration without inserting a slip paper into the slip printer when the register is programmed as "slip paper insertion into slip printer compulsory before finalizing registration" produces an error.

TK-3200 User's Manual 71 E

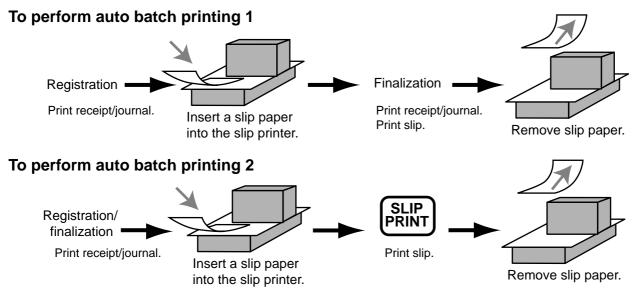

About the maximum number of slip lines

You can program the maximum number of lines that can be printed on a slip. Once you do, any attempt to exceed the preset maximum results in an error. When such an error occurs, press <C>, change slip paper and press <SLIP PRINT> to restart printing.

Check tracking systems

Check tracking system

With the check tracking system, the amount, check number, number of slip print lines, store number, date/time and registration detail data are stored in two files (check tracking index file and check tracking detail file).

- Check tracking detail file and index file are cleared by the following timing:
- 1. The check is cleared after printing finalized data on slip or guest check receipts, or the check is also cleared when the new or old check operation is made.
- 2. The check is cleared after printing finalized data on slip or guest check receipt, or check is also cleared when the same finalized check number is assigned in new check operation.
 - You can select one of these options by programming.
- Auto new balance function
 - The register can be programmed so that whenever a clerk (by clerk key) signs off while a check is open, a <NEW BALANCE> operation is automatically performed to temporarily finalize the open check.
- You can specify a range of checks that can be opened by each clerk. Once you do, any attempt by a clerk to open a check using a number that is not within his specified range results in an error.
- Either of the following two operations can be used to correct input of a wrong check number.

<NEW CHECK>

Re-input the correct check number, or cancel the original check number, issue a receipt, and then re-input the correct check number.

<OLD CHECK>, <NEW/OLD>

Temporary finalize the original check number, issue a receipt, and then re-input the correct check number.

Opening a check

Example

			0. =		
Check#		1234	1 2 3 4 New CHECK 3 3 TABLE #	CHECK No.1234 TBL# 000033	
Item 1	Dept 1	\$10.00	1 0 00 1	1 DEPTO1 -10.00 1 DEPTO1 -10.00	
nem 1	Quantity	2	1	1 DEPTO2 •20.00 1 DEPTO2 •20.00	New balance fee
Item 2	Dept 2	\$20.00	2 0 00 2	1 DEPT03 •30.00	
Item 2	Quantity	2	2	+ ·0.50 SRVC TL -90.50	
Item 3	Dept 3	\$30.00	3 0 00 ₃		
Item 3	Quantity	1	Insert slip		
•	'		NB		

RECEIPT

OPERATION

Remove slip

Press <NEW BALANCE> to temporarily close the transaction. If you want to finalize a check immediately, use <CASH>, <CHARGE>, <CREDIT> or <CHECK>.

Adding to a check

Example

			OPERATION	RECEIPT
Check# 1234 Table# 33			1 2 3 4 CHECK 3 0 00 1	TABLE No.000033 CT 1 CHECK No.1234
Itam 1	Dept 1	\$30.00	1 0 00 2	ST -90.50 1 DEPT01 -30.00
Item 1	Quantity	1	Insert slip	1 DEPTO2 -10.00
Item 2	Dept 2	\$10.00	NB	+ •0.50 SRVC TL
Item 2	Quantity	1	Remove slip	-131.00

- The table number is stored in the check tracking index memory so its input is not required in this operation even if table number input is preset as compulsory. Table number input after inputting the check number may be performed, however, without generating an error.
- Once a check is opened under a number in a certain mode (REG1 or REG2), the same mode must be used to make additions to the check.

TK-3200 User's Manual 73 E

Issuing a guest receipt

The following operation can be used to print out the balance of a temporarily finalized check.

Example

OPERATION

RECEIPT



Input the number of check you want.

	LE No.000033 CK No. 123	
1	DEPTO1 DEPTO1	-10.00 -10.00
1	DEPTO2	-20.00
	DEPT02	-20.00
	DEPT03 +	•30.00 •0.50
1	DEPT01	-30.00
1	DEPT02	·10.00
	 	•0.50
,	SRVC TL • 1 3	1.00


Closing a check memory

Example

OPERATION

RECEIPT



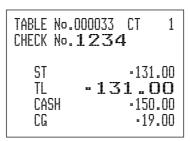


SLIP

REG CO1 TABLE No CHECK No	i	-2006 MC#01	17:05 0001 CT	
1 1 1 1 1 1 1 1 1	DEPTO1 DEPTO2 DEPTO2 DEPTO2 DEPTO3 + SRVC TL DEPTO1 DEPTO2 + SRVC TL TL CASH CG	•90 •131 •131	•30.00 •10.00 •0.50 • OO	

New/old check key operation

Example 1

When a check number is input and <NEW/OLD> is pressed, the key works as a new check key function if there is no matching check number in the check tracking memory.

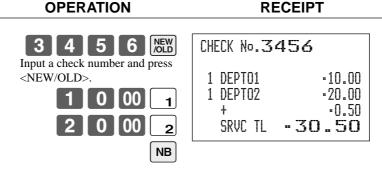

Example 2

When a check number is input and <NEW/OLD> is pressed, the key works as an old check key if there is matching check number in the check tracking memory.

OPERATION	RECEIP	'1
3 4 5 6 NEW OLD 3 1 00 CA/AMT TEND	CHECK No.3456 ST TL -30 CASH CG	·30.50 D.50 ·31.00 ·0.50

Add check


This operation lets you combine the amounts of more than one check into a single check.

Example

Registration for check number 1234

Original check Check# 1234 Dept 1 \$10.00 Item 1 1 Quantity Dept 2 \$20.00 Item 2 Quantity 1



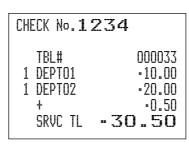

RECEIPT

Registration for check number 3456




RECEIPT



Check#		3456
Item	Dept 1	\$30.00
Itelli	Quantity	1




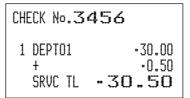

Registration for check number 1234



RECEIPT

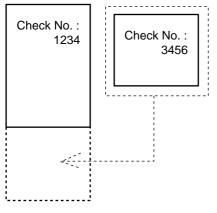

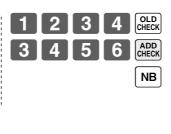


TABLE No.000033 CHECK No.1234	CT	1
ST ADD CHK ST + SRVC TL - 61	-30. 34 -30. -0.	56 50 50

Separate check

This operation makes it possible to split a single check into separate checks.

Example

Original check

Check#		1234
Item 1	Dept 1	\$10.00
Ittili i	Quantity	1
Item 2	Dept 2	\$20.00
Item 2	Quantity	1
Item 3	Dept 3	\$30.00
item 3	Quantity	1
Item 4	Dept 4	\$40.00
Itelli 4	Quantity	1

Separated check

Check#		3456
Item 1	Dept 1	\$10.00
	Quantity	1
Item 2	Dept 3	\$30.00
Item 2	Quantity	1
Payment	Cash	\$40.00

OPERATION

RECEIPT

CHECK No.3456



This input of a temporary check number can be skipped.

1 2 3 4 SEPARATE CHECK

Input the original check number by <SEP CHK>.

Display shows the 1st item which will be separated.



After <SEP CHK>, this item is separated.



Display shows the 3rd item which will be separated.









CA/AMT TEND

TK-3200 User's Manual **77** E

Price reductions (red price)

You can use the reduced price function to change a price; generally to an amount that is less than the normal price. You can program the register so that it prints the normal price, and the difference between the two prices on the receipt, while on journal, these items are always printed.


The following functions are able to work with red price.

- Department and PLU
- Quantity extension (Preset price is required for both department and PLU.)
- Amount limitation of item program (It effects to new price.) Note that you cannot use red price with the following types of item.
 - Department and PLUs programmed with negative unit prices
 - Set menus and link PLUs
 - Multiplication operations that use the format: Amount × Quantity

Example 1

OPERATION RECEIPT 4 00 RED PRICE -6.00 -Old price Dept 1 \$6.00 RED Item RED PRC -2.00Reduced price Input a reduced price. Red price \$4.00 *4.00 1 DEPT01 New price (Difference between two prices) TI -4.00 6 00 \$4.00 Payment Cash CASH -4.00

Example 2

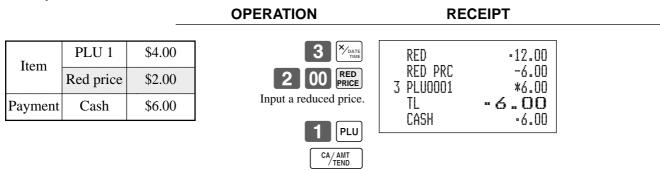

Advanced Operations

Condiment/preparation PLUs

You can force entering condiment or preparation PLU after the main PLU registration by programming.

Example (condiment PLU)

OPERATION

RECEIPT

Main item	PLU 1	\$10.00
	PLU 11	\$0.10
Condiment	PLU 12	\$0.20
	PLU 13	\$0.30
Payment	Cash	\$10.60

1 PLU
Registering main PLU.
No condiment registration
occurs an error condition.



CA/ AMT TEND

1	PLU0001	-10.00
	PLU0011	-0.10
	PLU0012	•0.20
	PLU0013	-0.30
	TL	-10.60
	CASH	-10.60

Example (preparation PLU)

OPERATION

RECEIPT

Main item	PLU 20	\$20.00
	PLU 21	\$0.00
Preparation	PLU 22	\$0.00
	PLU 23	\$0.00
Payment	Cash	\$20.00





1	PLU0020	-20.00
	PLU0021	
	PLU0022	
	PLU0023	
	TL	-20.00
	CASH	-20.00

TK-3200 User's Manual

VAT breakdown printing


You can force printing of the VAT breakdown at the finalize stage, regardless of whether the cash register is programmed to print or skip printing of the VAT breakdown.

Every time you want to have VAT breakdown, press <VAT>.

Example

Dept 1 \$1.00 Item 1 Taxable 1 PLU 1 (\$2.00)Item 2 2 Taxable Cash \$3.00 Payment

OPERATION

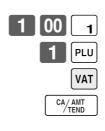

RECEIPT

1	DEPT01	T1	-1.00
1	PLU0001	T2	-2.00
	TA1		-0.90
	TX1		-0.10
	TA2		-1.90
	TX2		-0.10
	TL	-3	
	CASH		-3.00

Advanced Operations

Deposit registrations

Use the following procedures to register deposits.

Deposit from customer

OPERATION

RECEIPT






CA/AMT TEND


DEPO--50.00 -50.00 TL CASH -50.00

Deposit from customer during sales transaction

OPERATION

RECEIPT

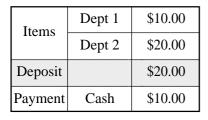

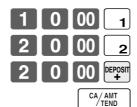

1	DEPTO1	-10.00
I	DEPTO2 DEPO+	•20.00 -20.00
	TL	-10.00
	CASH	-10.00

TK-3200 User's Manual

Bill copy

Example 1


To issue a copy of a bill dated February 1, 2006 in the amount of \$35.00 cash.

OPERATION RECEIPT ** BILL TOP MESSAGE 0 2 0 0 ** BILL TOP MESSAGE 2 ** Bill top message *1 Enter date by date order. ** BILL TOP MESSAGE 3 ** ** BILL TOP MESSAGE 4 ** 5 00 02-01-2006 REG C01 MC#01 * BILL COPY MESSAGE 1 ** * BILL COPY MESSAGE 2 **- Bill copy message *1 * BILL COPY MESSAGE 3 ** * BILL COPY MESSAGE 4 ** -35.00 TA1 TX1 •3.50 → Add-on tax amount -38.50 TL -38.50 CASH ** BILL BTM MESSAGE 1 ** ** BILL BTM MESSAGE 2 ** Bill bottom message *1 ** BILL BTM MESSAGE 3 ** ** BILL BTM MESSAGE 4 ** *1 Programmable option

Note that you can finalize this operation using the cash amount tendered key.

Example 2

To issue a copy of a bill dated February 1, 2006 in the amount of Euro 30.00 cash (sub-currency).

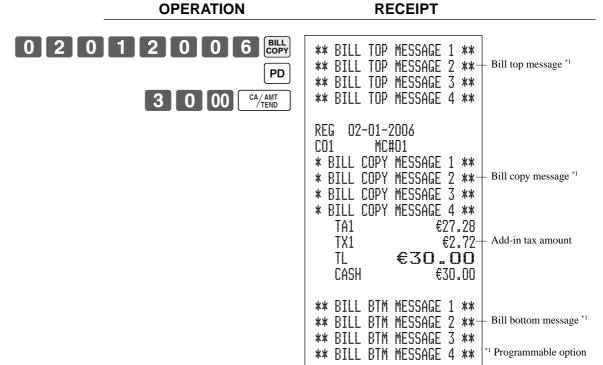

Actual stock quantity inquiry

With this operation, you can recall the actual stock quantity for PLUs and show it on the display of the cash register.

Example

To check the actual stock quantity of PLU 32 and flat-PLU 001.

OPERATION DISPLAY (7segment)

STOCK INQ

OD1

OD1


Actual stock quantity are appeared.

Unit price inquiry

Use this operation to recall the unit prices of departments, PLUs, or scanning PLUs. The unit prices appear on the display of the cash register when recalled.

Example

To check the unit price of PLU 32, flat-PLU 001, department 1.

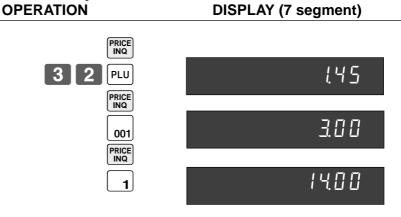

TK-3200 User's Manual 83 E

Previous item void using <REVIEW>

OPERATION

You can correct the previously registered item(s) in the same transaction by using <REVIEW> (review key).

CA/AMT TEND


Example

Dept. 1 \$2.35 Item 1 2 3 5 1 1 Quantity Dept. 2 \$2.00 Item 2 Quantity 1 2 00 (\$1.20)_{prese} PLU 1 Item 3 Quantity 1 PLU \$2.35 Dept. 1 Corrected Item 1 1 Quantity REVIEW Payment Cash \$3.20 Review the item to be corrected. VOID Press <VOID> to correct.

DEPTO I	2.35
DEPTO2	2.00
PLU00 I	1.20
DEPTO I	2.35
DEPTOS	2.00
CASH	3.2 O

DISPLAY

RECEIPT

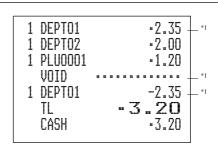

*1 These items can be skipped by program.

Scanning PLU

Product barcodes are read by scanning with hand-held scanner, and are filed in the scanning PLU file together with the unit price, item descriptor, programming status, link department, totalizer and counter.

When a barcode is entered by scanning, or from the keyboard by using <OBR> (OBR key) or <One touch NLU> (One touch NLU key) and it has been filed in the scanning PLU file, the preset unit price is accumulated to its own totalizer and other appropriate totalizers.

RECEIPT

Scanning PLUs include UPC-A/UPC-E/EAN-13/EAN-8, source marking, in-store marking code.

OPERATION


Item registration

By scanner/code input/one touch NLU key

			OPERATION	REC	CIP I	
Item 1 (scan)	Scan-PLU PLU code	, ,	"Scanning"	1 Scan-PLU01 #49012347	•2.35	Scanning PLU code *1
Item 2 (code)	Scan-PLU PLU code	(\$2.00) 123456	1 2 3 4 5 6 OBR	1 Scan-PLU02 #123456 1 Scan-PLU03 #49012354	-2.00 -1.23	*1 Programmable option
Item 3 (OTN)	Scan-PLU PLU code	,	Scanning-PLU code and OBR key	TL CASH	-5.58 -5.58	
Payment	Cash	\$5.58	One touch NLU			
			CA/AMT TEND			

Not found PLU

When a scanning PLU item which does not exist in the scanning PLU file is registered, an error occurs (Item not found error). In this case, you can input this item to the ECR and register it at the same time. After this operation, "Item not found error" does not occur during the next registration.

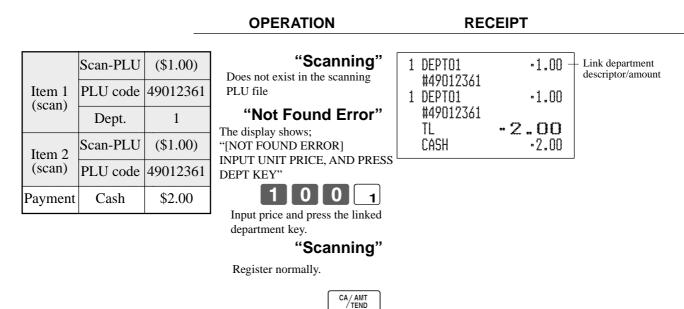


TK-3200 User's Manual 85 🗉


Programming to clerk

You can program up to 4-digit assigning number (clerk number), trainee status of clerk (i.e. training cashier) and commission rate for each clerk.


Programming clerk number

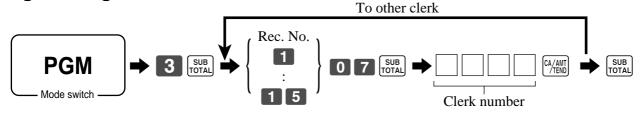

Programming trainee status

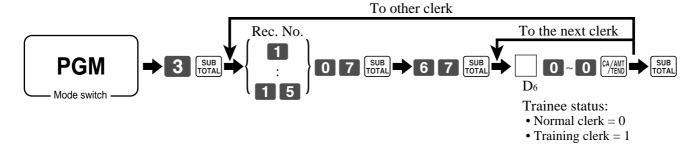

Programming commission rate

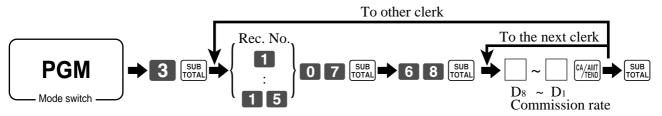

									Co	ommiss	ion rate	2		
Record No.	Clerk number				Trainee status		Co	mmiss	ion rate	e 1	Con	nmissio	on rate 2	2
Record No.							Inte	ger	Deci	mal	Inte	ger	Deci	mal
	D_4	D_3	D_2	D_{1}	D_6	00000	D_8	D_7	D_6	D_5	D_4	D_3	D_2	D_1
1						00000								
2						00000								
3						00000								
4						00000								
5						00000								
6						00000								
7						00000								
8						00000								
9						00000								
10						00000								
11						00000								
12						00000								
13						00000								
14						00000								
15						00000								

Character programming can be performed in two ways:


- Character keyboard programming (see page 91), or
- Entering characters by code (see page 92).

Programming descriptors and messages

The following descriptors and messages can be programmed;

- Messages (Logo, commercial and bottom message)
- Clerk name
- PLU item descriptor
- Department key descriptor
- Machine number

Programming receipt message, machine No. and clerk name

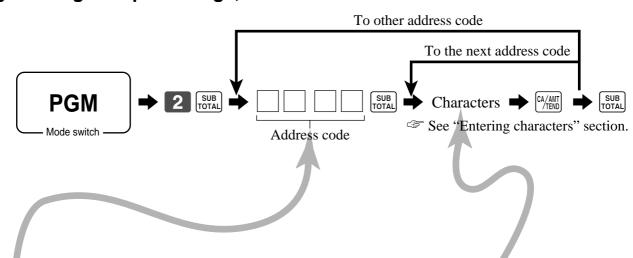


Address code	Contents	Initial character	Yours
0107	Clerk 01	C01	
0207	Clerk 02	C02	
0307	Clerk 03	C03	
0407	Clerk 04	C04	
0507	Clerk 05	C05	
0607	Clerk 06	C06	
0707	Clerk 07	C07	
0807	Clerk 08	C08	
0907	Clerk 09	C09	
1007	Clerk 10	C10	
1107	Clerk 11	C11	
1207	Clerk 12	C12	
1307	Clerk 13	C13	
1407	Clerk 14	C14	
1507	Clerk 15	C15	
0191	Machine number	MC#01	

TK-3200 User's Manual 87 E

Address code	Contents	Initial character	Yours
0132	1st line of logo message	YOUR RECEIPT	
0232	2nd line of logo message	THANK YOU	
0332	3rd line of logo message	CALL AGAIN	
0432	4th line of logo message		
0532	1st line of commercial message		
0632	2nd line of commercial message		
0732	3rd line of commercial message		
0832	4th line of commercial message		
0932	1st line of bottom message		
1032	2nd line of bottom message		
1132	3rd line of bottom message		
1232	4th line of bottom message		
1332	1st line of bill top message		
1432	2nd line of bill top message		
1532	3rd line of bill top message		
1632	4th line of bill top message		
1732	1st line of bill copy message		
1832	2nd line of bill copy message		
1932	3rd line of bill copy message		
2032	4th line of bill copy message		
2132	1st line of bill bottom message		
2232	2nd line of bill bottom message		
2332	3rd line of bill bottom message		
2432	4th line of bill bottom message		
2532	Post receipt message	DUPLICATE RECEIPT	
2632	1st line of guest intermediate msg.		
2732	2nd line of guest intermediate msg.		
2832	3rd line of guest intermediate msg.		
	4th line of guest intermediate msg.		
3032	1st line of guest bottom msg.		
	2nd line of guest bottom msg.		
	3rd line of guest bottom msg.		
3332	4th line of guest bottom msg.		
3432	5th line of guest bottom msg.		
3532	6th line of guest bottom msg.		
3632	7th line of guest bottom msg.		
3732	8th line of guest bottom msg.		
3832	9th line of guest bottom msg.		
3932	10th line of guest bottom msg.		
4032	1st line of Australian GST MOF msg.	TAX INVOICE	
4132	2nd line of Australian GST MOF msg.	* INDICATES	
4232	3rd line of Australian GST MOF msg.	TAXABLE SUPPLY	

Programming department/transaction key descriptor

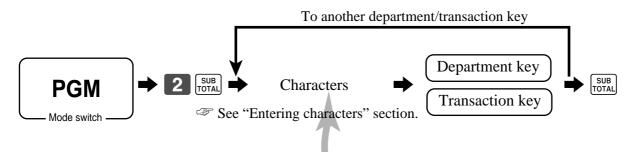


Contents	Initial character	Yours										
Department 01	DEPTO1											
Department 02	DEPTO2											
Department 03	DEPT03											
Department 04	DEPTO4											
Department 05	DEPT05											
Department 06	DEPT06											
Department 07	DEPT07											
:	:											

Contents	Initial character	Yours				
Cash / Amount tendered	CASH					
Charge	CHARGE					
Check	CHECK					
Credit 1	CREDIT1					
Credit 2	CREDIT2					
Received on account	RC					
Paid out	PD					
Minus	***					
Premium	%+					
Discount	7-					
Refund	RF					
Correction	CORR					
Receipt	RCT					
Non add / No sale	#/NS					
VAT	VAT					
Open	OPEN					
Subtotal	SUBTOTAL					
Receipt on / off	RCT ON/OFF					
Validation	VALID					
Multiplication	X					
Two zero	00					
Decimal point						
Help	HELP					

TK-3200 User's Manual 89 🗉

Programming flat-PLU descriptor

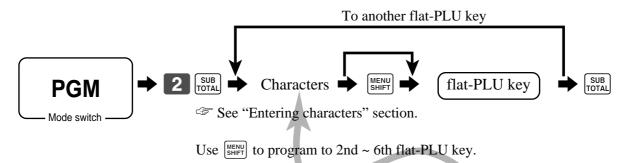

PLU No.	Contents	Initial character	Yours
001	PLU 001	PLU0001	
002	PLU 002	PLU0002	
003	PLU 003	PLU0003	
004	PLU 004	PLU0004	
005	PLU 005	PLU0005	
006	PLU 006	PLU0006	
007	PLU 007	PLU0007	
008	PLU 008	PLU0008	
009	PLU 009	PLU0009	
010	PLU 010	PLU0010	
011	PLU 011	PLU0011	
012	PLU 012	PLU0012	
013	PLU 013	PLU0013	
014	PLU 014	PLU0014	
015	PLU 015	PLU0015	
016	PLU 016	PLU0016	
017	PLU 017	PLU0017	
018	PLU 018	PLU0018	
019	PLU 019	PĒŪŌŌ19	
020	PLU 020	PLU0020	
021	PLU 021	PLU0021	
022	PLU 022	PLU0022	
023	PLU 023	PEUOO23	
024	PLU 024	PĒŪŌŌZĀ	
025	PLU 025	PLU0025	
026	PLU 026	PLU0026	
027	PLU 027	PLU0027	
028	PLU 028	PLU0028	
029	PLU 029	PLU0029	
030	PLU 030	PEU0030	
031	PLU 031	PĒŪŌŌ31	
032	PLU 032	PĒŪŌŌ32	
033	PLU 033	PĒŪŌŌ33	
034	PLU 034	PĒŪ0034	
035	PLU 035	PE00035	


Entering characters


In this section, the method to enter descriptors or messages (characters) to the cash register during programming is described.

Characters are specified by character keyboard or by codes. In the first half of this section, the usage of character keyboard is described. In the latter half, inputting method by character code is described.

Using character keyboard

Example:

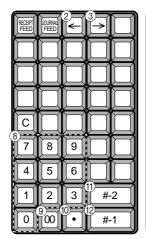

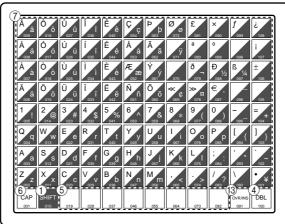

(1) Shift key

Press this key to shift the following characters from the uppercase letter to lowercase letter and returns to the uppercase letter in sequence.

(2) Left cursor key

Press this key to shift the character setting position to the left one by one. This key is used to correct already entered characters.

(3) Right cursor key

Press this key to shift the character setting position to the right one by one. This key is used to correct already entered characters.

4 Double size letter key

Press this key to specify that the next character you input to a double size character.

(5) Space key

Press this key to set a space.

(6) CAP key

Press this key to shift the character to the uppercase letter.

(7) Alphabet keys

Press these keys to input characters.

8 Numeric keys

Press these keys to enter program codes, memory number and character codes.

(9) Character fixed key

Press this key to enter when the alphabetic entry for a descriptor, name or message has been completed.

10 Backspace/Character code fixed key

Press this key to register one character with code (2 or 3 digit). It clears the last input character, much like a back space key. (Does not clear the double size letter key entry.)

11) Program end key

Press this key to terminate the character programming.

(12) Character enter key

Press this key to register the programmed characters.

(13) Insert/Override key

Press this key to change the status "Insert" between the original characters or "Override" the original characters.

TK-3200 User's Manual 91 E

Entering characters by code

Every time you enter a character, choose character codes by the character code list (below) and press the key to settle it. After you complete entering characters, press the 00 key to fix them.

Example:

Input "	Α	р	р	I	е		J	u	i	С	е		",
enter "	255 65	112	112	108	101	32	74	117	105	99	101	00	,,

Character code list

Chara	Code	Chara	Code	Chara	Code	Chara	Code	Chara	Code	Chara	Code	Chara	Code
Space	32	0	48	@	64	Р	80	'	96	р	112	Ç	128
!	33	1	49	Α	65	Q	81	а	97	q	113	ü	129
"	34	2	50	В	66	R	82	b	98	r	114	é	130
#	35	3	51	С	67	S	83	С	99	S	115	â	131
\$	36	4	52	D	68	Т	84	d	100	t	116	ä	132
%	37	5	53	Е	69	U	85	е	101	u	117	à	133
&	38	6	54	F	70	V	86	f	102	V	118	å	134
'	39	7	55	G	71	W	87	g	103	W	119	Ç	135
(40	8	56	Н	72	Х	88	h	104	Х	120	ê	136
)	41	9	57	I	73	Υ	89	i	105	у	121	ë	137
*	42	:	58	J	74	Z	90	j	106	Z	122	è	138
+	43	;	59	K	75	[91	k	107	{	123	ï	139
,	44	<	60	L	76	\	92	I	108		124	î	140
-	45	=	61	М	77]	93	m	109	}	125	ì	141
	46	>	62	N	78	۸	94	n	110	~	126	Ä	142
/	47	?	63	0	79		95	0	111		127	Å	143
	47		03		19	_	93		111		127		143
Chara	Code	Chara	Code	Chara	Code	- Chara	Code	Chara	Code	Chara	Code	Chara	Code
		I		l		Chara		I		Chara Ó			
Chara	Code	Chara	Code	l	Code		Code	Chara ð Đ	Code		Code	Chara	Code
Chara É	Code 144	Chara á	Code 160	l	Code 176	L	Code 192	Chara ŏ Đ Ê	Code 208	Ó	Code 224	Chara	Code 240
Chara É æ	Code 144 145	Chara á í	Code 160 161	l	Code 176 177	L	Code 192 193	Chara ð Ð Ê	Code 208 209	Ó ß	Code 224 225	Chara	Code 240 241
Chara É æ	Code 144 145 146	Chara á í ó	Code 160 161 162	l	Code 176 177 178	L L	Code 192 193 194	Chara ŏ Đ Ê	Code 208 209 210	Ó ß Ô	Code 224 225 226	Chara - ± -	Code 240 241 242
Chara É æ Æ ô	Code 144 145 146 147	Chara á í ó ú	Code 160 161 162 163	Chara	Code 176 177 178 179		Code 192 193 194 195	Chara ð Ð Ê	Code 208 209 210 211	Ó ß Ô Ò	Code 224 225 226 227	Chara - ± - 3/4	Code 240 241 242 243
Chara É æ Æ ô ö	Code 144 145 146 147 148	Chara á í ó ú ñ	Code 160 161 162 163 164	Chara	Code 176 177 178 179 180	L ————————————————————————————————————	Code 192 193 194 195 196	Chara ð Ð Ê Ë È	Code 208 209 210 211 212	Ó ß Ô Ò	Code 224 225 226 227 228	Chara - ± - 3/4 ¶	Code 240 241 242 243 244
Chara É æ Æ ô ö	Code 144 145 146 147 148 149	Chara á í ó ú ñ	Code 160 161 162 163 164 165	Chara	Code 176 177 178 179 180 181	L 	Code 192 193 194 195 196	Chara ð Ð Ê Ë	Code 208 209 210 211 212 213	Ó ß Ô Ò Õ Õ	Code 224 225 226 227 228 229	Chara - ± - 3/4 ¶ §	Code 240 241 242 243 244 245
Chara É æ Æ ô ö ù ù	Code 144 145 146 147 148 149 150	Chara á í ó ú ñ Ñ a	Code 160 161 162 163 164 165 166	Chara IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	Code 176 177 178 179 180 181 182	L 	Code 192 193 194 195 196 197	Chara ð Ð Ê Ë È	Code 208 209 210 211 212 213 214	Ó β Ô Ò Õ Õ μ	Code 224 225 226 227 228 229 230	Chara - ± - 3/4 ¶ § ÷	Code 240 241 242 243 244 245 246
Chara É æ Æ ô ö ù ù	Code 144 145 146 147 148 149 150	Chara á í ó ú ñ Ñ a	Code 160 161 162 163 164 165 166	Chara IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	Code 176 177 178 179 180 181 182 183	L	Code 192 193 194 195 196 197 198	Chara ð Ð Ê Ë É í	Code 208 209 210 211 212 213 214 215	Ó ß Ô Ò Õ Õ μ þ	Code 224 225 226 227 228 229 230 231	Chara - ± - 3/4 ¶ § ÷	Code 240 241 242 243 244 245 246 247
Chara É æ Æ ô ö ù ù	Code 144 145 146 147 148 149 150 151	Chara á í ó ú ñ Ñ a o	Code 160 161 162 163 164 165 166 167	Chara I I I I I I I I I I I I I I I I I I	Code 176 177 178 179 180 181 182 183	L	Code 192 193 194 195 196 197 198 199 200	Chara ð Ð Ê Ë É í	Code 208 209 210 211 212 213 214 215 216	Ó ß Ô Õ Õ μ þ	Code 224 225 226 227 228 229 230 231 232	Chara - ± - 3/4 ¶ § ÷	Code 240 241 242 243 244 245 246 247 248
Chara É æ Æ ô ö ù ù ÿ Ö	Code 144 145 146 147 148 149 150 151 152	Chara á í ó ú ñ Ñ a o ¿ ®	Code 160 161 162 163 164 165 166 167 168	Chara I I I I I I I I I I I I I I I I I I	Code 176 177 178 179 180 181 182 183 184		Code 192 193 194 195 196 197 198 199 200 201	Chara ð Ð Ê Ë É í í ĵ	Code 208 209 210 211 212 213 214 215 216 217	Ó ß Ô Õ Õ μ þ	Code 224 225 226 227 228 229 230 231 232 233	Chara - ± - 3/4 ¶ § ÷	Code 240 241 242 243 244 245 246 247 248 249
Chara É æ Æ ô ò ù ù ÿ Ö Ü	Code 144 145 146 147 148 149 150 151 152 153	Chara á í ó ú ñ Ñ a o ¿ ®	Code 160 161 162 163 164 165 166 167 168 169	Chara I I I I I I I I I I I I I I I I I I	Code 176 177 178 179 180 181 182 183 184 185	L	Code 192 193 194 195 196 197 198 199 200 201 202	Chara ð Ð Ê Ë i i i i	Code 208 209 210 211 212 213 214 215 216 217 218	Ó ß Ô Õ Õ μ þ Þ Ú	Code 224 225 226 227 228 229 230 231 232 233 234	Chara - ± - 3/4 ¶ § -	Code 240 241 242 243 244 245 246 247 248 249 250
Chara É æ Æ ô ö ù ù ÿ Ö Ü	Code 144 145 146 147 148 149 150 151 152 153 154 155	Chara á í ó ú ñ Ñ a o ¿ ® ¬ 1/2	Code 160 161 162 163 164 165 166 167 168 169 170	Chara	Code 176 177 178 179 180 181 182 183 184 185 186	L T H A A L T T	Code 192 193 194 195 196 197 198 199 200 201 202 203	Chara ŏ Ð Ê Ë È i	Code 208 209 210 211 212 213 214 215 216 217 218 219	Ó ß Ô Õ Õ μ þ Þ Ú Û	Code 224 225 226 227 228 229 230 231 232 233 234 235	Chara - ± - 3/4 ¶ § 1	Code 240 241 242 243 244 245 246 247 248 249 250 251
Chara É æ Æ ô ò ù ÿ Ö Ü ø £	Code 144 145 146 147 148 149 150 151 152 153 154 155	Chara á í ó ú ñ Ñ a o ¿ ® ¬ 1/2 1/4	Code 160 161 162 163 164 165 166 167 168 169 170 171	Chara	Code 176 177 178 179 180 181 182 183 184 185 186 187	L	Code 192 193 194 195 196 197 198 199 200 201 202 203 204	Chara ŏ Ð Ê Ë È i	Code 208 209 210 211 212 213 214 215 216 217 218 219 220	Ó ß Ô Õ Õ μ Þ Ú Û Ú	Code 224 225 226 227 228 229 230 231 232 233 234 235 236	Chara - ± - 3/4 ¶ § - 1 3	Code 240 241 242 243 244 245 246 247 248 249 250 251 252

Editing characters

Correcting a character just entered

OPERATION

DISPLAY (14segment)

"L" "E" "N" "O" "N"

⇔Press left arrow key three times.

<

□ Override mode

"M" Enter "M".



Correcting and adding a PLU descriptor already set

OPERATION

DISPLAY (14segment)

00 <⊐Enter "00".

1 5 PLU

⇔ Override mode

"L" Enter "L".



Correcting a key descriptor already set

OPERATION

DISPLAY (14segment)

00

 $\rightarrow || \rightarrow || \Rightarrow |$ \triangleleft Press right arrow key two times.

"M" <□Enter "M".

□ Delete "N".



Correcting a message descriptor already set

OPERATION

DISPLAY (14segment)

Enter record and file number.

⇔ Press right arrow key two times.

"O" <

Enter "O".

□ Delete "A".



TK-3200 User's Manual 93 E

Printing read/reset reports

Daily sales read report ("X1" mode)

You can print read reports at any time during the business day without affecting the data stored in the cash register's memory.

• Daily sales reset report ("Z1" mode)


You should print reset reports at the end of the business day.

Important!

- The reset operation issues a report and also clears all sales data from the cash register's memory.
- Be sure to perform the reset operations at the end of each business day. Otherwise, you will not be able to distinguish between the sales data for different dates.


To print the individual department, PLU/flat-PLU read report

This report shows sales for specific departments or PLUs/flat-PLUs.

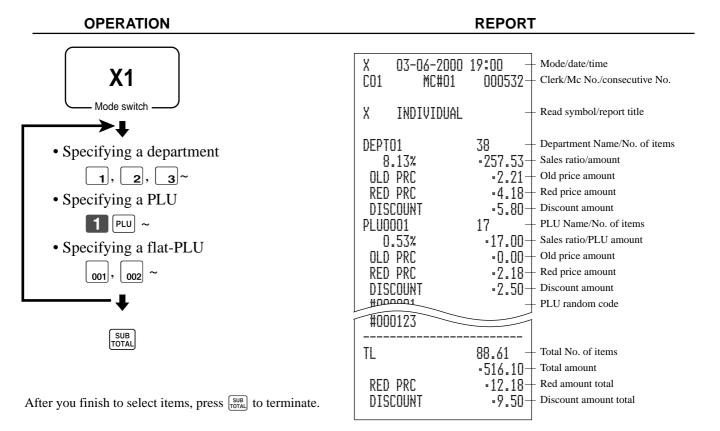


To print the financial read report

This report shows gross sales, net sales, cash in drawer and check in drawer.

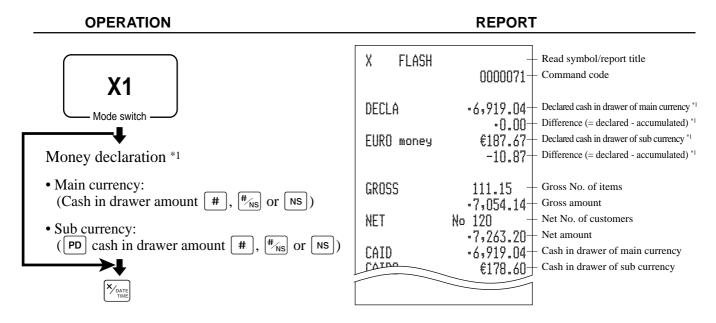

To print the individual clerk read/reset report

This report shows individual clerk totals.

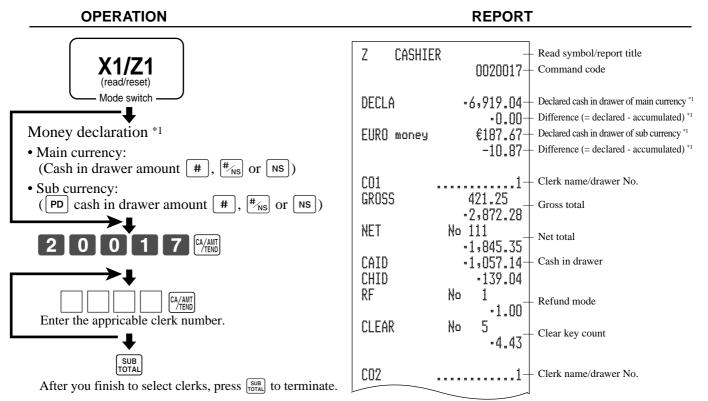

^{*1} Money declaration:

Count how much cash is in the drawer and input this amount (up to 10 digits).


The cash register will automatically compare the input with the cash in drawer in the memory and print the difference between these two amounts.

Note that if money declaration is required by programming, you cannot skip this procedure.

TK-3200 User's Manual 95 E

To print the daily sales read/reset report

This report shows sales except for PLUs.

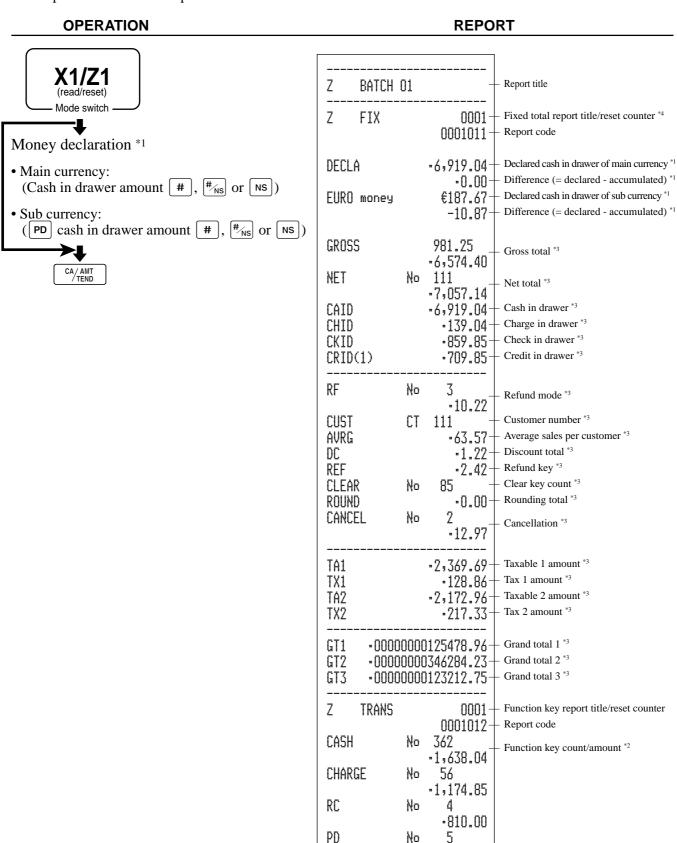

·520.00

	Хo	14 •39.55	
VLD RCT NS	No No No	19	
Z DEPT	-	0001 - 0001015 -	Department report title/reset count Report code
DEPTO1 8.13% OLD PRC RED PRC DISCOUNT DEPTO2		•257.53- •2.21-	Department name/No. of items *2 Sales ratio/amount *2 Old price amount *2 Red price amount *2 Discount amount *2
RED PRC DISCOUNT	· ···· ··· ··· ···	*1Z3.Z1 *17.22	
TL RED PRC DISCOUNT		88.61 - -1,916.10- -12.18- -9.50-	Total No. of items Total amount Red amount total Discount amount total
Z CASHI	ER		Clerk report title/reset counter Report code
CO1 GROSS		1- 421.25 _ •2,872.28	Clerk name/drawer No.Gross total
NET CAID CHID		-139.04	Net total Cash in drawer
RF CLEAR	No No	1 •1.00 5 •4.43	Refund mode Clear key count
CO2		1-	– Clerk name/drawer No.

*1 Money declaration:

Count how much cash is in the drawer and input this amount (up to 10 digits).

The cash register will automatically compare the input with the cash in drawer in the memory and print the difference between these two amounts.

Note that if money declaration is required by programming, you cannot skip this procedure.

- *2 Zero totalled departments/functions (the amount and item numbers are both zero) are not printed.
- *3 These items can be skipped by programming.
- *4 The "*" symbol is printed on the reset report, memory overflow occurred in the counter/totalizer.


TK-3200 User's Manual 97 🗉


To print the PLU/flat-PLU read/reset report

This report shows sales for PLUs.

OPERATION

REPORT

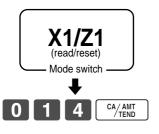

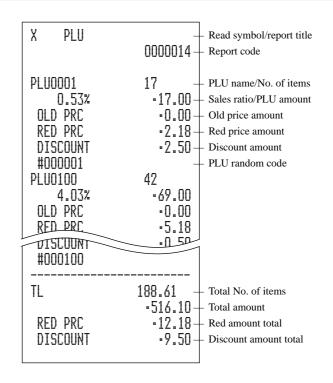



To print the hourly sales read/reset report

This report shows hourly breakdowns of sales.

OPERATION

REPORT

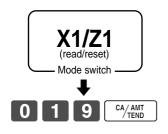


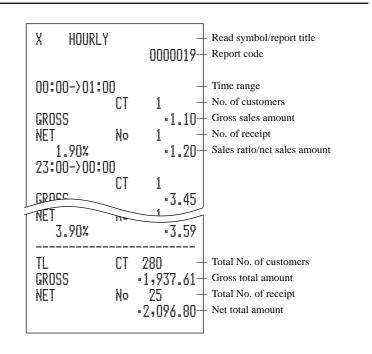


To print the monthly sales read/reset report

This report shows monthly breakdowns of sales.

OPERATION REPORT

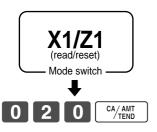


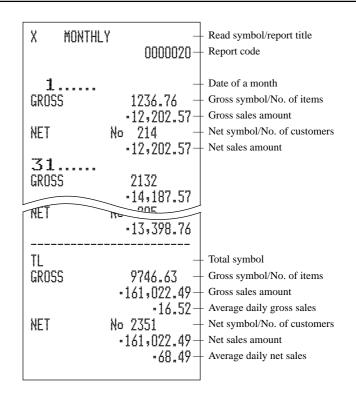


To print the group read/reset report

This report shows PLU/department group totals.

OPERATION REPORT

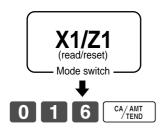

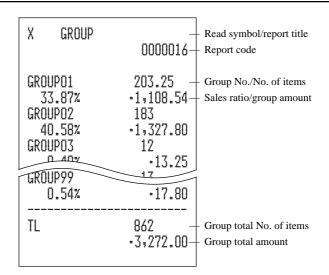

TK-3200 User's Manual 99 E

Periodic sales read report ("X2" mode)

You can print read reports at any time during the business day without affecting the data stored in the cash register's memory.


Periodic sales reset report ("Z2" mode)


You should print reset reports at the end of the business day.

To print the periodic 1/2 sales read/reset reports

These reports show sales breakdowns of sales by any two kinds of period you want.

OPERATION REPORT

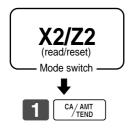

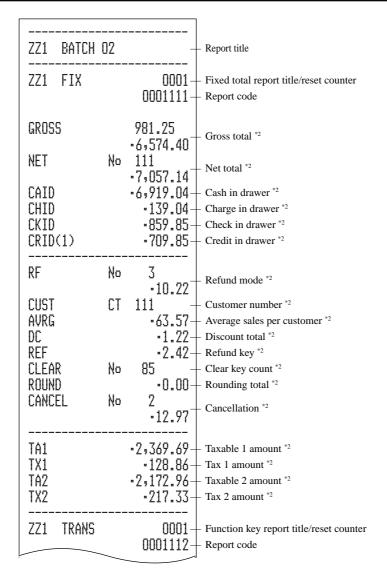

CASH	Νο	362	- Function key count/amount *1
CHARCE		·1 ₂ 638.04	
CHARGE	No	56	
RC	Хo	·1,174.85 4	
N.C	NO	•810 . 00	
PD	Хo	5	
		<u>- 5.00</u>	
CORR	Νo	14	
		. <u>.</u> 39.55	
VLD	Nо	19	
RCT	Хo	3 5	
NS	Мо	J	
ZZ1 DEPT	•	0001 _	- Department report title/reset count
		0001115	- Department report title/reset count - Report code
		0001110	- Report code
DEPT01		38 _	- Department Name/No. of items *1
8.13%		•257 . 53 <u> </u>	- Sales ratio/amount *1
OLD PRC		-2.21 -	- Old price amount *1
RED PRC		-4.18	- Red price amount *1
DISCOUNT		•5.80	- Discount amount *1
DEPT02		183 •1,362.26	
	_	•123.21	
DISCOUNT		11:44	
TL		88.61	- Total No. of items
		•1,916.10	- Total amount
RED PRC		•12.18	- Red amount total
DISCOUNT		•9.50	- Discount amount total
ZZ1 CASH	 ITED	 0001 _	
771 CUNI	ITTI	0001117	Clerk report title/reset counterReport code
		0001111	- Report code
CO1 .		1	- Clerk name/drawer No.
GROSS		421.25	
		-2,872.28	- Gross total
NET	Хo	111	- Net total
CATD		·1,845.35	
CAID CHID		*1,057.14 _ *139.04	- Cash in drawer
RF.	No	137.04	
IVI	110	1.00	- Refund mode
CLEAR	Nο	5	
		-4.43	- Clear key count
CO2 .		1 +	- Clerk name/drawer No.

 $^{^{*1}}$ Zero totalled departments/functions (the amount and item numbers are both zero) are not printed.


TK-3200 User's Manual 101 E

^{*2} These items can be skipped by programming.

To print other sales read/reset reports

The following reports can be issued.

Procedure

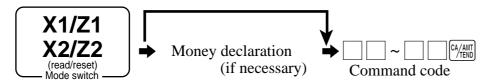


Report/command code list

Report name	Command code # = 0 # = 1 (read) (reset)			Report name	Command code # = 0 # = 1 (read) (reset)		
	Daily	Periodic 1	Periodic 2		Daily	Periodic 1	Periodic 2
Fix totalizer	11	#111	#211	Department	15	#115	#215
Transaction key	12	#112	#212	best 50 (amount order)	60015	60115	60215
PLU by record number (all) *	14	#114	#214	best 50 (quantity order)	70015	70115	70215
all PLU by random code *	14	#114	#214	Group	16	#116	#216
by group	1000014	100#114	100#214	Clerk	17	#117	#217
by department	2000014	200#114	200#214	individual	20017	2#117	2#217
individual by group	1020014	102#114	102#214	Hourly sales	19	#119	#219
individual by department	2020014	202#114	202#214	Monthly sales	20	#120	#220
range by record number *	10014	1#114	1#214	Open check	25		
range by random code *	10014	1#114	1#214	total	40025		
best 50 (amount order)	60014	60114	60214	Scanning PLU by range department (all)	26		
best 50 (quantity order)	70014	70114	70214	by range group	1000026		
menu (1st)	81	#181	#281	by range department	2000026		
menu (2nd)	82	#182	#282	best 50 by range department	80026		
menu (3rd)	83	#183	#283	inactive item by range department	90026		
menu (4th)	84	#184	#284	Scanning PLU stock by range department (all)	65		
menu (5th)	85	#185	#285	by range group	1000065		
menu (6th)	86	#186	#286	by range department	2000065		
PLU stock all PLU by record number *	64			Table analysis	28	#128	#228
all by random PLU code *	64			Mix & match	61	#161	#261
by group	1000064			Financial	71		
by department	2000064			Individual (item / transaction key)	No code		
individual by group	1020064			PLU reset (no report)	50014	51114	51214
individual by department	2020064			Scanning PLU reset (no report)	50026		
range by record number *	10064			Scanning PLU stock reset (no report)	50065		
range by random code *	10064			* You can choose by record number / random	n code by j	program.	_

Reading the cash register's program

To print unit price/rate program (except PLU/scanning PLU)

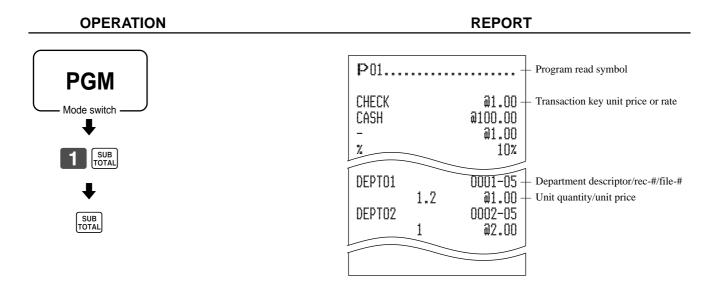


TK-3200 User's Manual 103 E

To print key descriptor, name, message program (except PLU)

OPERA1	ΓΙΟΝ		REPORT				
PGM Mode switch SUB TOTAL SUB TOTAL							
P02GR0SS	0001-01 0002-01	– Program read symbol	BATCH 01 0001-29 BATCH 02 0002-29 BATCH 03 0003-29 Batch X/Z character				
CATL CHECK	0003-01- 0004-01 0005-01	- Fix total character	0004-29 O001-32 YOUR RECEIPT 0002-32 THANK YOU Receipt message				
CREDIT2 PD DEPT01 DEPT02	0003-02 0004-02 0001-05	Transaction key character Department character	0001-33 ***ENDORSE MESSAGE***** ********** Check endorsement message				
GROUPO1 GROUPO2 GROUPO3	0003-06	- Group character	0002-33 0001-34 ***SLIP MESSAGE******* ********** Slip/external printer message 0002-34				
C01 C02 C03	0004-04 0001-07 0002-07 0003-07 0004-02	– Clerk character	0001-39 CHARACTER RECALL******* *********** ********** Recall character				
TBL01 TBL02 TBL03	0001-18 0002-1 8 0003-18 0004-18	- Table character	0002-39 ******** MC#01 0001-91 Terminal connection table character				
GT2 GI3	0001-Z0 0002-20 0003-20		0001-96 AT COMMAND********* ************ AT command				
• ano/ ** € Noct alb *qt X blisy	0001-23 0002-23 0003-23	Special character	0002-96 ATA ATI4				
FIX TRANS PLU	0001-24 0002-24 0003-24 0004-24	Report header character	PASSWORD 0001-97 Online password				

To print the PLU/flat-PLU program

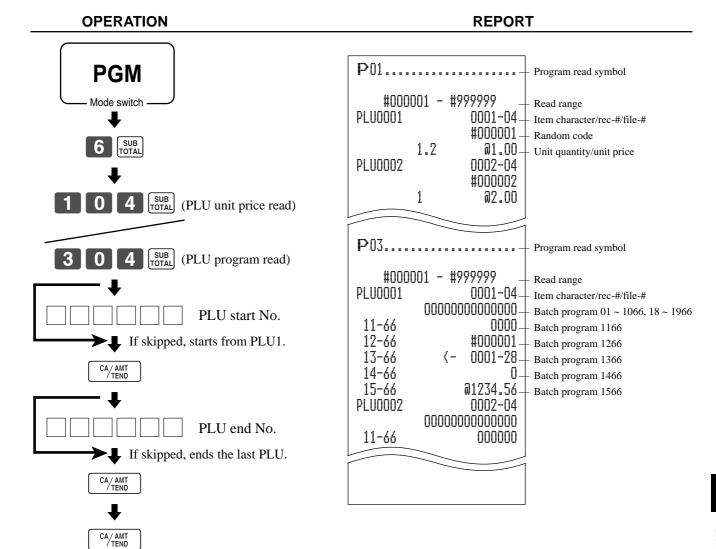

TK-3200 User's Manual 105 E

This section describes what to do when you have problems with operation.

When an error occurs

Errors are indicated by an error codes. When this happens, you can usually find out what the problem is as illustrated below.

Press **C** and check the appropriate section of this manual for the operation you want to perform.


Error code	Message	Meaning	Action
E001	WRONG MODE	Mode switch position changed before finalization.	Return the mode switch to its original setting and finalize the operation.
E003	WRONG OPERATOR	Clerk button pressed before finalization of a registra-	Press the original clerk button and finalize the
-000	miorio of Emilion	tion being performed under another clerk button.	transaction before pressing another clerk button.
		The signed on clerk differs from the clerk performed	Input correct check number or assign the proper clerk
		the tracking check registration.	number.
E004	ERROR INIT/FC	Initialization or unit lock clear operation in progress.	Complete operation.
E005	INSUFFICIENT MEMORY	Memory allocation exceeds total memory capacity.	Reallocate memory or expand memory (if possible).
F008	PLEASE SIGN ON	Registration without entering a clerk number.	Enter a clerk number.
	ENTER PASSWORD	Operation without entering the password.	Enter password.
E010	CLOSE THE DRAWER	The drawer is left open longer than the program time (drawer open alarm).	Close the drawer.
E011	CLOSE THE DRAWER	Attempt to register while the cash drawer is open.	Shut the cash drawer.
E016	CHANGE BACK TO REG	Two consecutive transactions attempted in the refund	Switch to another mode and then back to the RF mode
	MODE	mode.	for the next transaction.
E017	ENTER CHK/TBL	Attempt made to register an item without inputting a	Input a check number.
	NUMBER	check number.	
E018	ENTER TABLE NUMBER	Attempt made to register an item without inputting a table number.	Input a table number.
E019	ENTER NUMBER OF	Finalize operation attempted without entering the	Enter the number of customer.
	CUSTOMERS	number of customer.	
_	NO DEPT LINK	No department linked PLU is registered.	Correct the program.
E023	STOCK SHORTAGE	Actual stock quantity becomes less than the minimum stock quantity.	Perform stock maintenance.
E024	NO STOCK	Actual stock quantity becomes/is negative.	Perform stock maintenance.
E026	ENTER CONDIMENT/	No condiment/preparation PLU is registered.	Register condiment/preparation PLU.
	PREPARATION PLU		
E029	OPERATION	Item registration is prohibited, while partial tender.	Finalize the transaction.
E030	PRESS RATE TAX KEY	Finalization of a transaction attempted without registering rate-tax.	Register <rate tax="">.</rate>
E031	PRESS ST KEY	Finalization of a transaction attempted without confirming the subtotal.	Press <subtotal>.</subtotal>
E032	PRESS FSST KEY	Finalization of a transaction attempted without confirming of the food stamp subtotal.	Press <fs st="">.</fs>
E033	ENTER TENDERED AMOUNT	Finalize operation attempted without entering amount tender.	Enter the amount tendered.
F035	CHANGE AMOUNT	Change amount exceeds preset limit.	Input amount tendered again.
-000	EXCEEDS LIMIT	Change amount cheeses preset minu	mput umount tenuerou ugum
E036	REMOVE MONEY FROM THE DRAWER	Contents of the drawer exceed programmed limit.	Perform pick up operation.
E037	DIGIT OR AMOUNT LIMITATION OVER	High amount lock out/low digit lock out error	Enter correct amount.
E038	PERFORM MONEY	Read/reset operation without declaring cash in drawer.	Perform money declaration.
-000	DECLARATION	This error appears only when this function is activated.	
E040	ISSUE GUEST RECEIPT	Attempt to register a new transaction without issuing a guest receipt.	Issue a guest receipt.
E041	PRINT VALIDATION	Attempt to register a new transaction without validation.	Perform validation operation.
E042		Validation paper (slip printer) has run out.	Insert new validation paper.
F044	PRINT CHEQUE	Attempt to register a new transaction without printing check.	Perform check print.
E045	PRINT CHECK EN-	Attempt to register a new transaction without printing	Perform check endorsement.
<u> </u>	DORSEMENT	check endorsement.	
E046	REG BUFFER FULL	Registration buffer full.	Finalize the transaction.
E047	PRINT BILL	Separate check buffer full.	Allocate sufficient separate check buffer.
E048	INSERT SLIP PAPER	Attempt to register a new transaction without printing slip.	Perform slip printing operation.

Error code	Message	Meaning	Action
couc	AND RETRY	No paper is inserted or paper is out in the slip printer.	Insert new slip paper.
E049	CHECK MEMORY FULL	Check tracking index memory full.	Finalize and close the check number currently used.
E050	DETAIL MEMORY FULL	Check tracking detail memory full.	Finalize and close the check number currently used.
E051	CHK/TBL NO. IS OCCU- PIED	Attempt to made use <new check=""> to open a new check using a number that is already used for an existing check in check tracking memory.</new>	Finalize and close the check that is currently under the number that you want to use or use a different check number.
E052	CHK/TBL NO. IS BUSY	Attempt to use the same check number whilst the specified number is being used in the other terminal.	Use another check number or close the check at that terminal.
E053	CHK/TBL NO. IS NOT OPENED	Attempt made to use <old check=""> reopen a new check using a number that is not used for an existing check in check tracking memory.</old>	Use the correct check number (if you want to reopen a check that already exists in check tracking memory) or use <new check=""> to open a new check.</new>
E054	OUT OF CHK/TBL NO. RANGE	Check number range over.	Enter correct number.
E055	IN THE SEP CHK OPERA- TION	Normal registration is prohibited during separate check operation.	Terminate separate check operation.
E056	CHK RANGE FULL	All check number are occupied in range.	Recall the stored data.
	PRESS EAT-IN OR TAKE- OUT KEY	Attempt to finalize a transaction without specifying <eat-in> or <take-out>.</take-out></eat-in>	Press <eat-in> or <take-out>.</take-out></eat-in>
	PRINTER OFFLINE	External printer offline	
	PRINTER ERROR	External printer went down.	
	PRINTER PAPER END	External printer paper end	Replace new paper.
E064	PRINT BUFFER FULL	Printing buffer full	
E066	PRINT FROM THE BEGIN- NING OF THE TRANSAC- TION	Attempt to print the last separated transaction on slip.	Print from the beginning of the transaction
	NEGATIVE BALANCE CANNOT BE FINALIZED	Attempt to finalize a transaction when balance is less than or equal to zero.	Register item(s) until the balance becomes positive amount.
E085	DATA EXIST IN CON- SOLIDATION FILE	Data exists in the consolidation file.	Clear the data.
E100	OPERATE AT THE MASTER TERMINAL	Prohibit master operation.	Perform it at master terminal.
E101	PLU MAINTENANCE FILE FULL. PRESS <#2> TO EXIT	Scanning PLU direct maintenance/batch maintenance file becomes full.	Terminate the maintenance.
E103	PLU CODE IS NOT EXIST. INPUT THE PLU CODE	PLU code is not existed in the file.	Enter proper PLU code.
	PLU FILE FULL	Scanning PLU/not found PLU file full	Modify the designated item.
	ITEM EXISTS IN THE PLU FILE	The designated item has already existed in the scanning PLU file.	
	CLOSE THE JOURNAL PLATEN ARM	The journal platen arm is opened.	Close the journal platen arm.
	CLOSE THE RECEIPT PLATEN ARM	The receipt platen arm is opened.	Close the receipt platen arm.
E139	NEGATIVE BALANCE IS NOT ALLOWED	Attempt to register <-> or <cpn> when the balance becomes negative.</cpn>	Enter proper minus/coupon amount.
	ARRANGEMENT FILE FULL	Arrangement file is full.	Set the arrangement properly.
	EMPLOYEE NO. IS NOT FOUND IN THE EMPLOYEE FILE	Attempt to enter a wrong employee number which is not set to the employee file.	Enter proper employee number.
E165	EMPLOYEE NO. IS NOT CLOCKING-IN.	Attempt to clock out the employee who is not clocked in.	Enter proper employee number.
E166	EMPLOYEE NO. IS OCCUPIED	Attempt to clock in the employee who has clocked in already.	Enter proper employee number.
	TIME&ATTENDANCE FILE FULL	Time and attendance file becomes full.	Delete unused employee number or reallocate the time and attendance file.
E200	INSERT CF CARD	No CF card is set.	Set CF card.
E201	ILLEGAL FORMAT	Illegally formatted CF card	Format the CF card.
	FILE NOT FOUND	The designated file is not found in the CF card.	Enter proper file name.
	INSUFFICIENT MEMORY	Insufficient memory in the CF card.	Use a vacant (formatted) CF card.
E205	FILE ALREADY EXIST.	Can not write, because designated file has already been in the CF card.	Check the operation and retry.

TK-3200 User's Manual 107 E

When the register does not operate at all

Perform the following check whenever the cash register enter an error condition as soon as you switch it on. The results of this check are required by service personnel, so be sure to perform this check before you contact a CASIO representative for servicing.

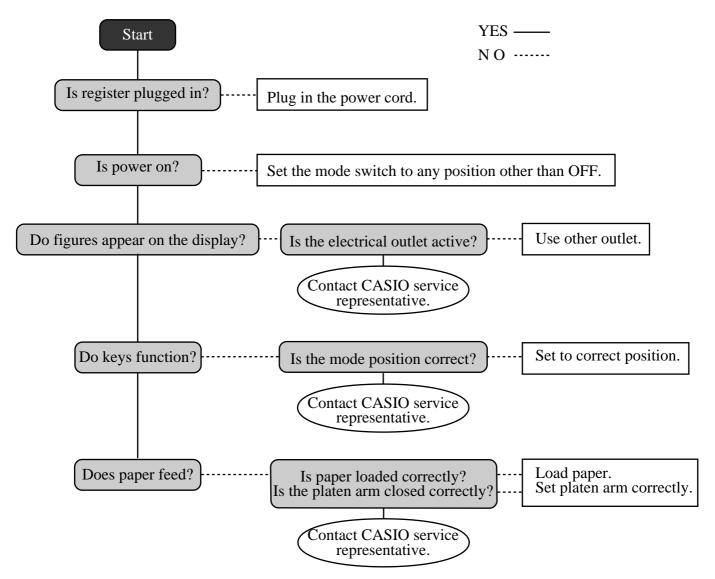

Clearing a machine lock up

If you make a mistake in operation, the cash register may lock up to avoid damage to programs and preset data. Should it happens, you can use the following procedure to clear the lock up without losing any data.

- 1 Power off the register.
- 2 Insert the PGM key (U.K.) or the OW key (other area) in the mode switch.
- 3 Press down [RECEPT], and turn the mode switch to PGM mode.
- 4 The display shows ten Fs, then release [FEED].
- 5 Press [SUB]. The display shows ten Fs and issue a receipt.

Important!

• If the register does not show ten Fs, never press | SUBAL | and call service representative.

In case of power failure

If the power supply to the cash register is cut by a power failure or any other reason, simply wait for power to be restored. The details of any on-going transaction as well as all sales data in memory are protected by the memory backup batteries.

- Power failure during a registration
 - The subtotal for items registered up to the power failure is retained in memory. You will be able to continue with the registration when power is restored.
- Power failure during printing a read/reset report
 - The data already printed before the power failure is retained in memory. You will be able to issue a report when power is restored.
- Power failure during printing of a receipt and the journal
 Printing will resume after power is restored. A line that was being printed when the power failure occurred is printed in full.
- Other
 - The power failure symbol is printed and any item that was being printed when the power failure occurred is reprinted in full.

Notes


The memory protection battery is constantly charging and discharging as you switch the cash register on and off during normal operations. This causes the capacity of the battery to decrease after approximately five years of use.

Important!

- Remember a weak battery has the potential of losing valuable transaction data.
- A label on the back of the cash register shows the normal service period of the battery installed in your cash register.
- Have the battery replaced by your dealer within the period noted on this label.

TK-3200 User's Manual 109 E

To replace journal paper

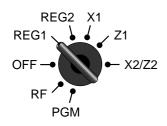



Step 1 Set the mode switch to the REG1 position and remove the printer cover.



Step 2 Press | VOURNAL | to feed about 20 cm of paper.



Step 6 Cut the journal paper as shown in the photograph.



Step 3 Cut the journal paper at the point where nothing is printed.



Step 7 Press FEED to feed the remaining paper from the printer.



Step 4 Remove the journal take-up reel from its holder.



Step 8 Do not pull the paper out of the printer by hand. It can damage the printer.



Step 5 Slide the printed journal from the take-up reel.



Step 9 Remove the old paper roll from the cash register.

Step 10 Load new paper as described on page 12 of

this manual.

To replace receipt paper

Follow the Step~1 under "To replace journal paper" on the previous page.



Step 2
Cut the receipt paper as shown in the photograph.



Step 4

Do not pull the paper out of the printer by hand. It can damage the printer.



Step 3

Press FEED to feed the remaining paper from the printer.



Step 5Remove the old paper roll from the cash register.

Complete
Load new paper as

Load new paper as described on page 11 of this manual.

TK-3200 User's Manual 111 E

To replace the ink ribbon




Step 1 Open the printer cover.



Step 4 Load a new ink ribbon cassette into the unit.



Step 2 Remove the printer sub

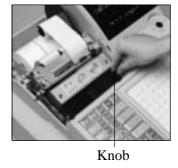

Step 5 Turn the knob on the right side of the cassette to take up any slack in the ribbon.



Step 3 Pull up the knob of the ribbon cassette.

Complete

Replace the printer cover and printer sub cover.

Important!

Use only the ERC-32(P) ribbon (purple). Other types of ink ribbons can damage the printer.

Never try to extend the life of an ink ribbon by replenishing the ink.

Once an ink ribbon is in place, press <#/NS> or <NS> to test for correct operation.


User Maintenance and Options

To replenish the stamp ink

Follow the $Step\ 1$ under "To replace journal paper" on the previous page.



Step 2Remove the stamp pad from its holder by lifting the knob.

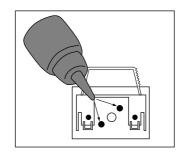

Step 3Squirt one or two drops of ink into the holes on the back of the stamp pad.

Complete

Replace the stamp pad on its holder.

Options

Roll paper: P-4575 External printer: UP-360

Ink ribbon: ERC-32(P) Cable: PRT-CB-8A or PRT-CB-8B

Stamp ink: SUPER INK KC Slip printer: SP-1300 Wetproof cover: WT-78 / WT-79 Cable: PRT-CB-8C

Hand held scanner: HHS-15 Power supply: 31AD-U or 31AD-E

Consult with your CASIO dealer for details.

TK-3200 User's Manual 113 E

Specifications

Input method

Entry: 10-key system, buffer memory 8 keys (2-key roll over)

Department: Full key system

Display

Main: Amount 10 digits (zero suppression); No. of repeats, total, change, receipt on/off, transaction indicator

Descriptor 8 digits; item descriptor, clerk name

Customer: Amount 8 digits (zero suppression): total, change indicator

Printer

Receipt: Dot matrix alpha-numeric system 24 digits, receipt on/off switch (key)

Store name or slogan is printed automatically

Logo stamp: $20 (H) \times 30 (W) mm$

Journal: Dot matrix alpha-numeric system 24 digits

Automatic take up roll winding

Validation: 55 digits, one line, for 135mm (minimum) wide slip

Paper roll: $45 \text{ (W)} \times 83 \text{ (D)} \text{ mm}$ Paper thickness: $0.06 \sim 0.09 \text{ mm}$

Paper feed: Separate for receipt and journal

About 3.0 1/s Print speed:

Listing capacity

Amount: 9999999 Quantity: 9999.999 Tendered amount: 999999999 Percent: 99.99 Tax rate: 9999.9999

99999999999999 Numbers:

Chronological data

Date print: Automatic date printout on receipt or journal, automatic calendar

Time print: Automatic time printout on receipt or journal, 24-hour system/12-hour system

Alarm

Key catch tone, error alarm, sentinel alarm

Memory protection battery

48-hour full charge protects memories for approximately 90 days.

Battery should be replaced every five years.

Power supply/power consumption

See the rating plate.

Operation temperature

 $0^{\circ}\text{C} \sim 40^{\circ}\text{C} (32^{\circ}\text{F} \sim 104^{\circ}\text{F})$

Humidity

 $10 \sim 90\%$

Dimensions and weight

 $331mm (H) \times 400mm (W) \times 454mm (D) / 13kg$...with medium size drawer $(13" (H) \times 15 \text{ 3/4"} (W) \times 17 \text{ 7/8"} (D) / 28 \text{lbs. } 11 \text{oz.})$

Totalizers			Contents			
Category	No. of totalizers	Amount (10 digits)	No. of items (6 integer/3 decimal)	Count (4 digits)	No. of customers (6 digits)	Periodic totalizers
Department	Up to 99	✓	✓			V
PLU	Up to 5000	✓	✓			
Clerk	15	✓	V	V	✓	✓
Hourly sales	24	✓			✓	
Monthly sales	31	✓	✓		✓	
Transaction		7	Variable with progra	m		✓
Non ressettable grand total	3	✓ (16 digits)				
Reset counter	12/15			V		
Consecutive No.	1			✓ (6 digits)		

^{*} Specifications and design are subject to change without notice.

Α	D
add check 28, 76 adding to a check 73 addition (+) 58 alphabet key 91 arrangement 28, 65	daily sales read/reset report 96 daily sales reset report 55 Danish rounding 18 date display 35 date setting 15
assigning a clerk 34	declaration 28
Australian rounding 18	department 26, 36
В	deposit 28, 81 descriptor 87
backspace key 91	discount (%-) 26, 43
bill copy 28, 82	display 24
bottle link 64 bottle return 28, 64	double size letter key 91 drawer 23
bottle return 28, 04 bottom message 32, 87	
C	E
cancel 26, 28, 54 CAP key 91 cash/amount tendered 27, 46 change 36 character code 92 character code fixed key 91 character enter key 91	eat-in 28 editing character 93 entering characters 91 error code 106 error correction 26, 52 Euro 26, 48
character fixed key 91	financial read report 95
character keyboard 91	flat PLU 27, 36
charge 27, 46 check 27, 46	G
check 27, 40 check endorsement 28	group read/reset report 99
check print 28	guest receipt 74
check tracking 72	н .
clearing a machine lock up 108 clerk button 23, 34	
clerk interrupt 56	high amount limitation 38 hourly sales read/reset report 98
clerk key/button 23, 34	nourry sales read/reset report 76
clerk name 34, 87	ı
clerk number 28, 86 clerk read/reset report 95	indicator 25
clerk secret number key 23, 34	individual clerk read/reset report 95
closing a check 74	individual department, PLU/flat-PLU read report 94 ink ribbon 20, 112
commercial message 32, 87	item counter 32
commission rate 86 condiment 79	J
consecutive No. 32	
correction 52	journal 32 journal skip 32
coupon 28, 61	
coupon II (2) 28, 61 credit 27	K
currency exchange 28, 66	keyboard 20, 26
cursor key 91	L
customer display 24	
customer number 28	loan 28, 62 logo message 32, 87

TK-3200 User's Manual 115 E

M	preset tax status 39
machine No. 32	preset tender 62
main display 20, 24	previous balance 29
media change 28, 63	previous balance subtotal 29
menu sheet holder 20	previous item void 84
menu shift 28	price 29, 42
	price change 29
merchandise subtotal 28	price inquiry 29
message 32, 87	price reductions (red price) 78
minus 26, 44	price shift 29
mixed tender 46	printer 20
mode key 21	printer cover 20
mode switch 22	printing slip 71
money declaration 95, 97	program end key 91
monthly sales read/reset report 99	В
multiplication 37, 41	R
multiplication/date/time 26	rate tax 29
multiplication/for 28, 37, 42	read report 94
N	recall 29
N	receipt 32
new balance 28, 73	receipt on/off switch 20
new check 28, 72	received on account 26, 51
new/old check 28, 72	red price 29, 78
no sale 26, 28	reduction 44
non add 26, 28	refund 26, 50
not found PLU 85	repeat 25, 36, 41
number of customers 69	reset report 55, 94
•	return 50
0	review 29, 77, 84
OBR (Optical barcode reader) 28	RF mode 50
old check 28, 72	
one touch NLU 28, 85	roll paper 20
open 26	roll paper installation 11
open 2 (release compulsion) 29, 70	rounding 18
open check 29	rounding (Australian rounding) 18
open PLU 42	rounding (Danish rounding) 18
opening a check 73	rounding (special rounding) 18
operator number 29	S
operator X/Z 29	
option 113	scanning PLU 85
•	separate check 29, 77
P	set menu 65
:	shift key 91
paid out 26, 51	sign off 34
paper feed 26	sign on 34
paper installation 11	single item 36, 41, 57
paper loading 11	slip 71
paper replacement 110	slip back feed/release 29, 71
periodic sales 100	slip feed/release 29, 71
pick up 29, 63	slip print 29, 71
PLU 40	space key 91
PLU/flat-PLU read/reset report 98	special rounding 18
pop-up display 20	split sales of packaged item 37, 42
post receipt 26	square 29
power failure 109	stamp ink 113
premium (%+) 26, 59	stock check 56
preparation 79	stock inquiry 29, 83
preset price 39	store 29

```
T
   table number 29, 73
   take-up reel 20
   takeout 29
   tax exempt 29
   tax shift 29
   tax table programming 16
   taxable amount subtotal 29
   text print 29
   text recall 29, 70
   time display 35
   time setting 15
   tip 29, 68
   trainee status 86
   tray total 29, 60
U
   unit price inquiry 83
٧
   validation 26, 47
   VAT 26, 80
   void 29
W
   wetproof cover 113
```

TK-3200 User's Manual 117 🗉

CASIO®